

# ENGINE IMMOBILIZER SYSTEM (W/O SMART ENTRY SYSTEM)

05J4V-01

## PRECAUTION

### NOTICE FOR INITIALIZATION:

When disconnecting the negative (-) battery terminal, initialize the following system(s) after the terminal is reconnected.

System Name	See Page
Power Window Control System	<a href="#">05-2028</a>

### NOTICE FOR HYBRID SYSTEM ACTIVATION:

- When the warning lamp is illuminated or the battery has been disconnected and reconnected, pressing the power switch may not start the system on the first try. If so, press the power switch again.
- If the power switch's power mode is to ON (IG), the battery is disconnected, and the key is not in the key slot during reconnection, DTC B2799 may be output.