

<b>DTC</b>	<b>P0A08/264</b>	<b>DC/DC CONVERTER STATUS CIRCUIT</b>
------------	------------------	---------------------------------------

## CIRCUIT DESCRIPTION

Refer to DTC P0A09 (INF 265) on page [05-483](#).

DTC No.	INF Code	DTC Detection Condition	Trouble Area
P0A08	264	DC/DC converter malfunction	• w/ converter inverter assembly

## INSPECTION PROCEDURE

When the HV control ECU detects an internal malfunction in the DC/DC converter, it sets DTC P0A08 (INF 264). If the information (INF) code is present, replace the w/ converter inverter assembly.

<b>REPLACE W/ CONVERTER INVERTER ASSY (See page <a href="#">21-23</a>)</b>
--