

DTC	P0A78/278	DRIVE MOTOR "A" INVERTER PERFORMANCE
------------	------------------	---

DTC	P0A78/280	DRIVE MOTOR "A" INVERTER PERFORMANCE
------------	------------------	---

CIRCUIT DESCRIPTION

See the description of the inverter on page [05-562](#).

If the motor inverter detects a circuit malfunction or over-voltage, the inverter transmits this information to the OVH terminal of the HV control ECU via the motor inverter over-voltage signal line.

The HV control ECU monitors the motor inverter over-voltage signal line to detect the malfunction.

DTC No.	INF Code	DTC Detection Condition	Trouble Area
P0A78	278	+B short in motor inverter over-voltage (OVH) signal circuit	<ul style="list-style-type: none"> • Wire harness or connector • w/ converter inverter assembly
P0A78	280	Open or GND short in motor inverter over-voltage (OVH) signal circuit	<ul style="list-style-type: none"> • Wire harness or connector • w/ converter inverter assembly

MONITOR DESCRIPTION

The HV control ECU monitors the motor inverter over-voltage (OVH) signal line. If the HV control ECU detects an open or short malfunction of the OVH signal circuit, the HV control ECU illuminates the MIL and sets a DTC.

MONITOR STRATEGY

Related DTCs	P0A78 (INF 278/280): Motor inverter/Motor inverter Sinv detection
Required sensor/components	Motor inverter
Frequency of operation	Continuous
Duration	TOYOTA's intellectual property
MIL operation	Immediately
Sequence of operation	None

TYPICAL ENABLING CONDITIONS

The monitor will run whenever the following DTCs are not present	TOYOTA's intellectual property
Other conditions belong to TOYOTA's intellectual property	–


TYPICAL MALFUNCTION THRESHOLDS

Over-voltage signal circuit	Open or short
-----------------------------	---------------

COMPONENT OPERATING RANGE

Motor inverter	DTC P0A78 (INF 278/280) is not detected
----------------	---

WIRING DIAGRAM

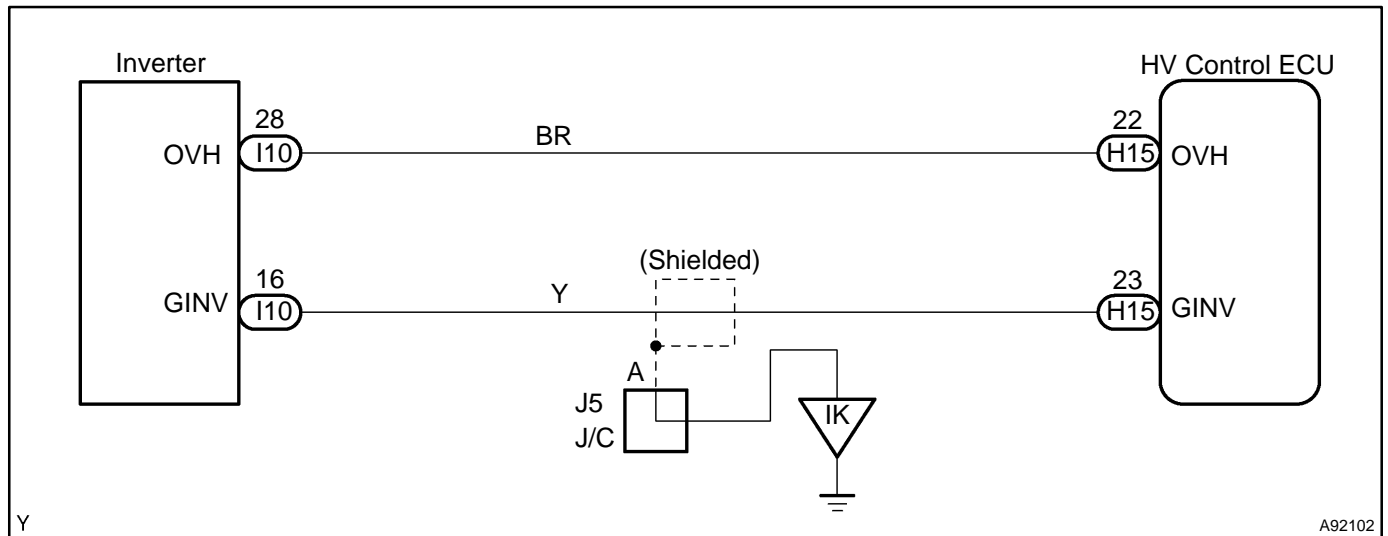

INSPECTION PROCEDURE

CAUTION:

- Before inspecting the high-voltage system, take safety precautions to prevent electrical shocks, such as wearing insulated gloves and removing the service plug grip. After removing the service plug grip, put it in your pocket to prevent other technicians from reconnecting it while you are servicing the high-voltage system.
- After disconnecting the service plug grip, wait at least for 5 minutes before touching any of the high-voltage connectors or terminals.

HINT:

At least 5 minutes is required to discharge the high-voltage condenser inside the inverter.

1 CHECK HARNESS AND CONNECTOR(HYBRID VEHICLE CONTROL ECU - INVERTER)

CAUTION:

Wear insulated gloves before performing the following operation.

- (a) Turn the power switch OFF.
- (b) Remove the service plug grip (see page 21-116).

NOTICE:

Turning the power switch ON (READY) with the service plug grip removed could cause malfunction. Therefore, never turn the power switch ON (READY) in this state.

- (c) Disconnect the H15 HV control ECU connector.
- (d) Remove the inverter cover (see page 21-23).
- (e) Disconnect the I10 inverter connector.
- (f) Turn the power switch ON (IG).

HINT:

DTCs for the interlock switch system are output when turning the power switch ON (IG) with both service plug grip and inverter cover removed.

- (g) Measure the voltage between the terminals of the HV control ECU connector and body ground.

Standard:

Tester Connection	Specified Condition
OVH (H15-22) - Body ground	Below 1 V
GINV (H15-23) - Body ground	Below 1 V

- (h) Turn the power switch OFF.
- (i) Check the resistance between the wire harness side connectors.

Standard (Check for open):



Tester Connection	Specified Condition
OVH (H15-22) - OVH (I10-28)	Below 1 Ω
GINV (H15-23) - GINV (I10-16)	Below 1 Ω

Standard (Check for short):

Tester Connection	Specified Condition
OVH (H15-22) or OVH (I10-28) - Body ground	10 kΩ or higher
GINV (H15-23) or GINV (I10-16) - Body ground	10 kΩ or higher

- (j) Reconnect the inverter connector.
- (k) Reconnect the HV control ECU connector.
- (l) Reinstall the inverter cover (see page 21-23).
- (m) Reinstall the service plug grip (see page 21-116).

NG REPAIR OR REPLACE HARNESS OR CONNECTOR

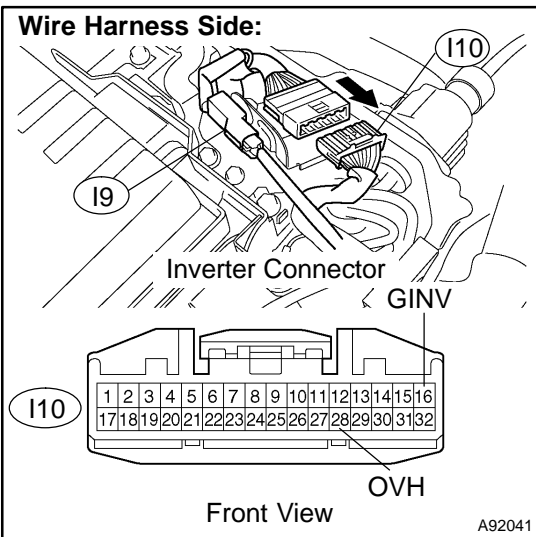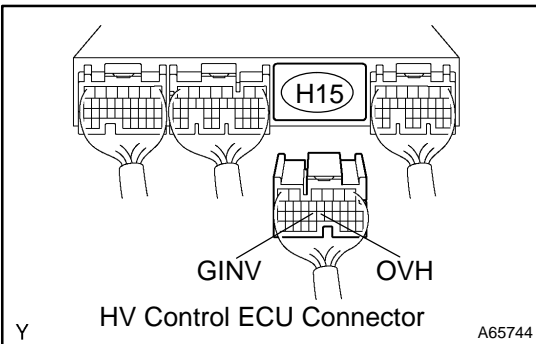

OK

REPLACE W/CONVERTER INVERTER ASSY (See page 21-23)