



# DISPLAY CHECK MODE (VEHICLE SIGNAL CHECK)

**HINT:**


- This mode checks the vehicle signal status input to the multi-display.
  - Illustrations may differ from the actual vehicle depending on the device settings and options. Therefore, some detailed areas may not be shown exactly the same as on the actual vehicle.
- 1. Enter diagnostic mode (see page 05-1763).**

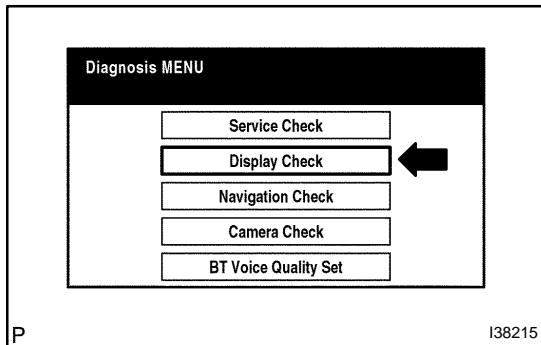

- 2. Select "Display Check" from the "Diagnosis MENU" screen.**

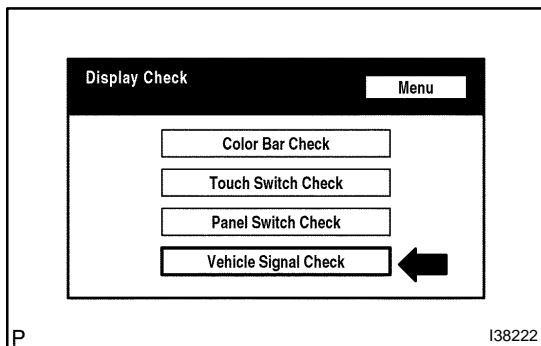

- 3. Select "Vehicle Signal Check" from the "Diagnosis MENU" screen.**

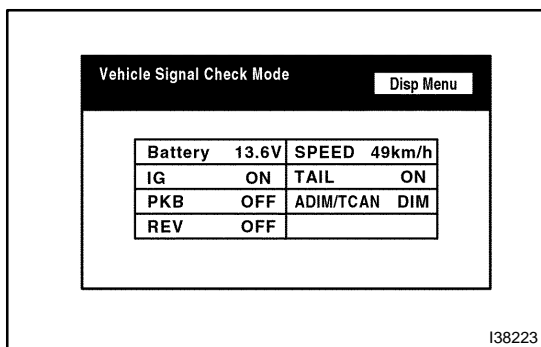

- 4. When the "Vehicle Signal Check Mode" screen is displayed, check all the vehicle signal conditions.**

**HINT:**

- Only conditions having inputs are displayed.
- This screen is updated once per second when input signals to the vehicle are changed.