

# CRUISE CONTROL SYSTEM

05HG3-01

## PRECAUTION

### NOTICE FOR INITIALIZATION:

When the negative (–) battery terminal is disconnected, initialize the following system after the terminal is reconnected.

System Name	See page
Power Window Control System	01-28

### NOTICES FOR HYBRID SYSTEM ACTIVATION:

- When the warning lamp is illuminated or the battery has been disconnected and reconnected, pressing the power switch may not start the system on the first try. If so, press the power switch again.
- With the power switch's power mode changed to ON (IG), disconnect the battery. If the key is not in the key slot during reconnection, DTC B2799 may be output.

### NOTICE:

Push the cruise control main switch ON-OFF button "off" and reset the cruise control if the CRUISE main indicator light blinks while driving with cruise control. When the cruise control cannot be set by this procedure or cancelled immediately after setting, there may be a problem in the cruise control system.

Do not inspect the cruise control system under the following road conditions:

- Heavy traffic
- Steep downhill
- Sharp turns
- Icy or snowy roads
- Slippery roads