


SEAT BELT WARNING LAMP FOR DRIVER'S SEAT DOES NOT OPERATE

WIRING DIAGRAM

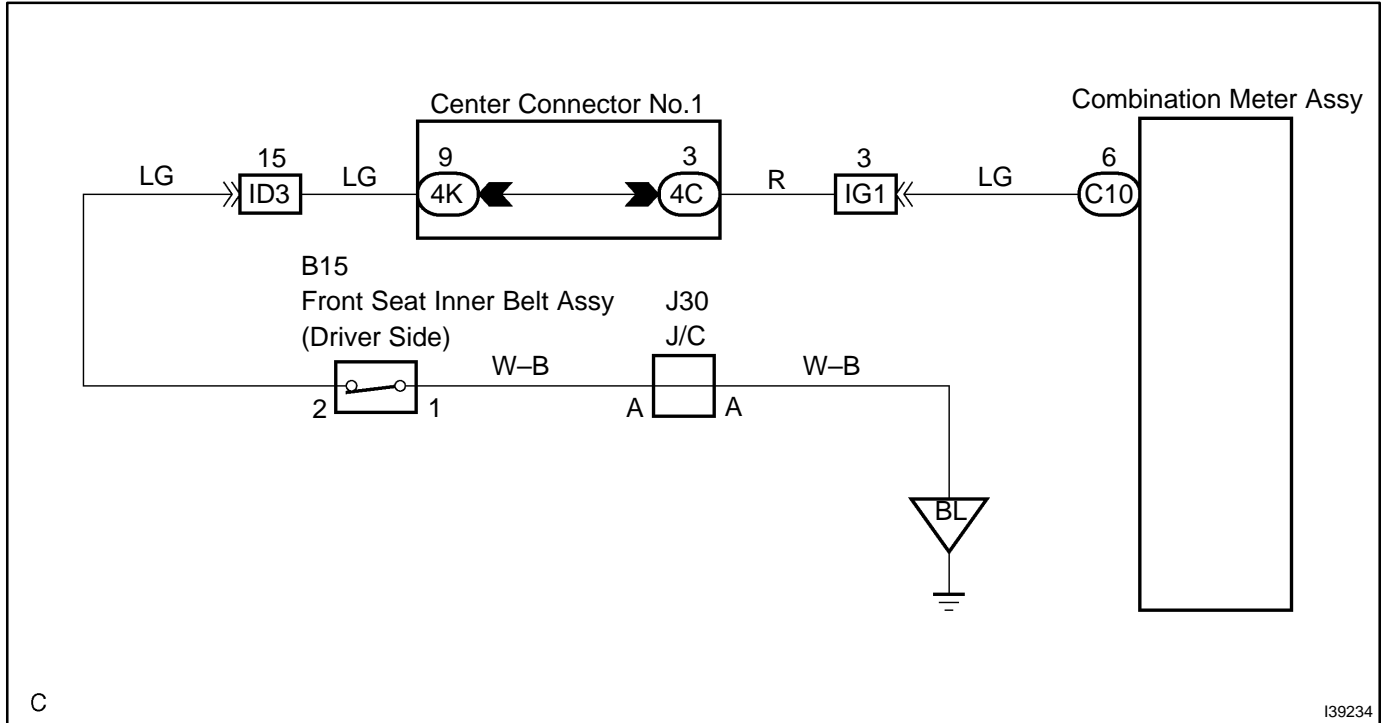

INSPECTION PROCEDURE

1 INSPECT FRONT SEAT INNER BELT ASSY(DRIVER SIDE)

Front Seat Inner Belt Assy (Driver Side) Connector Front View:

B15

140072

- (a) Disconnect the front seat inner belt assy connector.
- (b) Measure the resistance according to the value(s) in the table below.

Standard:


Terminal No	Condition	Specified condition
B15-1 - B15-2	Seat belt is fastened	10 kΩ or higher
B15-1 - B15-2	Seat belt is unfastened	Below 1 Ω

NG → **REPLACE FRONT SEAT INNER BELT ASSY (DRIVER SIDE)**


OK

2 CHECK HARNESS AND CONNECTOR(FRONT SEAT INNER BELT ASSY – COMBIATION METER ASSY)(SEE PAGE 01-37)

**Front Seat Inner Belt Assy (Driver Side)
Wire Harness View:**

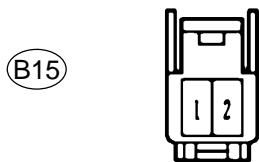

**Combination Meter Assy
Wire Harness View:**

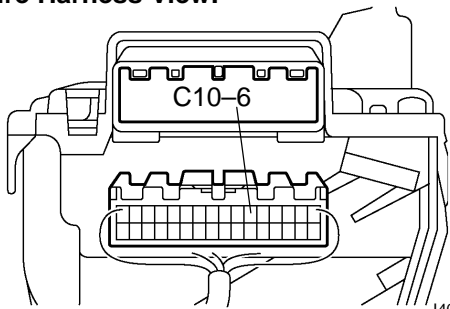

- (a) Disconnect the C10 and B15 connectors.
- (b) Measure the resistance according to the value(s) in the table below.

Standard:

Tester Connection	Condition	Specified Condition
C10-6 – B15-2	Always	Below 1 Ω
B15-1 – Body ground	Always	Below 1 Ω
C10-6 – Body ground	Always	10 kΩ or higher

NG REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

REPLACE COMBINATION METER ASSY(SEE PAGE 71-19)