

OPERATION CHECK

1. ILLUMINATED ENTRY OPERATION CHECK

- (a) Illumination entry system controls the following:
- Key slot lamp
 - Room lamp assy No.1
- (b) Check that the lamps come on after:
- (1) Unlocking driver or front passenger door that was closed and locked with the power switch off.
- (c) Check that the lamps fade out after:
- (1) Leaving the doors unlocked for 15 seconds.
 - (2) Turning the power switch on (ACC or IG).
 - (3) Locking all the doors.
- (d) Check that the lamps stay on for at least 15 seconds after opening any of the doors, then fade out again after 15 seconds.
- (e) Check that the lamps come on after:
- (1) Closing all the doors and turning the power switch off from on (ACC or IG).
- (f) Check that the lamps fade out after:
- (1) Leaving the doors unlocked for 15 seconds.
 - (2) Turning the power switch on (ACC or IG).
 - (3) Locking all the doors.
- (g) Check that the lamps stay on for at least 15 seconds after opening any of the doors, then fade out again in 15 seconds after closing all the doors.
- (h) Check that the lamps come on when opening any of the doors and fade out after either closing and locking them or turning the power switch on (ACC or IG).

2. CONLIGHT SYSTEM OPERATION CHECK

- (a) Turn the power switch on (IG).
- (b) Turn the headlamp dimmer switch to the AUTO position.
- (c) Cover the automatic light control sensor and check that the taillamp and headlamp come on in order.
- (d) Uncover the automatic light control sensor and check that the headlamp and taillamp go off in order.

3. LIGHT AUTO TURN OFF SYSTEM OPERATION CHECK

HINT:

Perform the operation check at a location with bright surroundings.

- (a) Turn the power switch on (IG), and switch the light control switch into the TAIL or HEAD position when driver side door is closed.
- (b) Turn the power switch off and open the driver's door. Check that the headlamp, taillamp, and front fog lamp go off.
- (c) Turn the power switch on (IG) and switch the light control switch into the AUTO position.
- (d) Turn the power switch off and open the driver's door when the light control switch is in the AUTO position and headlamps remain on by the conlight system operation. Check that the headlamp, taillamp, front fog lamp go off.

4. BATTERY SAVER OPERATION CHECK

- (a) Check that the all lamps go off after approximately 20 minutes with the power switch off and driver door is opened.

5. DAYTIME RUNNING LIGHT OPERATION CHECK

- (a) Turn the light control switch off, and release the parking brake with the power switch on (IG or READY). Check that the headlamp (low beam) dims.
- (b) Check that the daytime running light goes off after turning the power switch off or changing the light control switch to the HEAD position.
- (c) Check that the headlamp (low beam) dims when releasing the parking brake under the following conditions:
 - Light control switch is in the AUTO position (with bright surroundings).
 - Conlight system is not operating.
 - Power switch is on (IG).
 - Power switch is on (READY).
- (d) Turn the power switch off or change the light control switch to the TAIL or HEAD position. Check that the headlamp (low beam) goes off.