


# INSPECTION

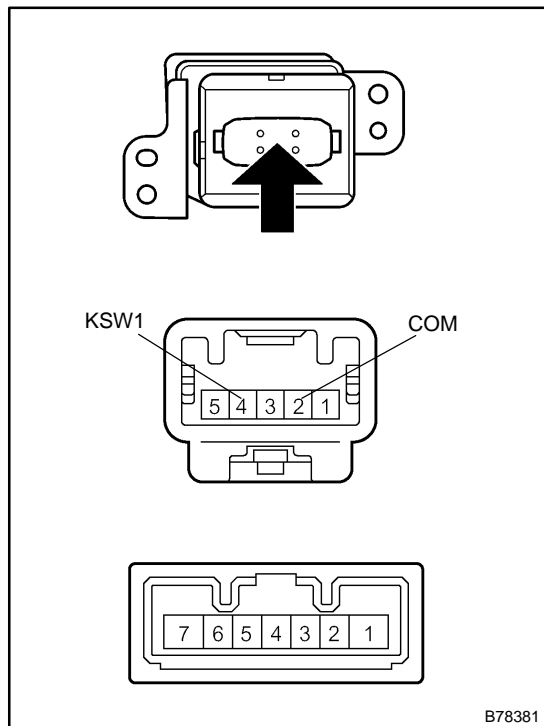


## 1. INSPECT KEY SLOT ASSY

- (a) Remove the key slot assy.
- (b) Measure the resistance of the slot.

### Standard:

Tester Connection	Switch Condition	Specified Condition
4 (KSW1) – 2 (COM)	Key is in key slot	Below 1 Ω
4 (KSW1) – 2 (COM)	No key in is slot	10 kΩ or higher

If the result is not as specified, replace the slot assy.

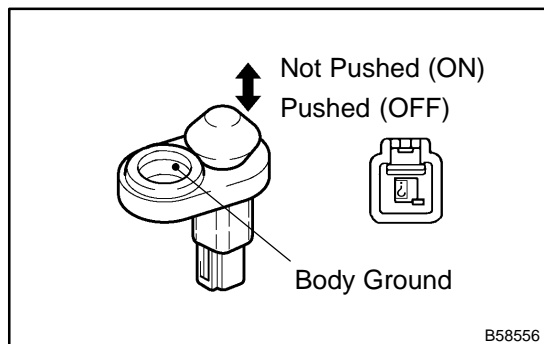

## 2. INSPECT FRONT DOOR COURTESY LAMP SWITCH ASSY (DRIVER SIDE)

- (a) Remove the courtesy lamp switch.
- (b) Measure the switch resistance.

### Standard:

Tester Condition	Switch Condition	Specified Condition
1 – Body ground	Not Pushed	Below 1 Ω
1 – Body ground	Pushed	10 kΩ or higher