

FAIL-SAFE CHART

If the transmission control ECU assy detects a malfunction, the fail safe functions shown in the table below are activated.

DTC No.	Fail-safe function	Problem symptoms
C2300 C2301	Only the P position release operation is possible and the shift control actuator assy is activated.	<ul style="list-style-type: none"> • The shift position is not indicated on the meter. • Although the shift position is indicated on the meter, the vehicle cannot be driven.
C2303	–	The battery is dead.
C2304 C2305 C2306	The transaxle parking lock control relay is turned off.	The parking lock mechanism cannot be switched.
C2307	The transaxle parking lock control relay is turned off.	<ul style="list-style-type: none"> • The shift position is not indicated on the meter. • Although the shift position is indicated on the meter, the vehicle cannot be driven.
C2311	–	The parking lock mechanism cannot be switched.
C2312	–	The hybrid system does not start up.
C2318	–	The parking lock mechanism cannot be switched on a hill.