

## CUSTOMIZE PARAMETERS

### HINT:

The following item can be customized.

### NOTICE:

- **When the customer requests a change in a function, first make sure that customization of the function(s) is possible.**
- **Be sure to record the current settings before customizing.**
- **When troubleshooting a function, first make sure that the function is not set to OFF.**

### WIRELESS DOOR LOCK:

Display (item)	Default	Contents	Setting
OPEN DOOR WARN (Open door warning)	ON	If door is not completely closed and transmitter LOCK switch is pressed, this function makes buzzer sound for 10 seconds.	ON/OFF
WIRLS BUZZ OPER (Buzzer answer–back of wireless)	ON	Function that makes wireless buzzer sound for answer–back when transmitter lock/unlock switch is pressed.	ON/OFF
WIRELESS OPER (Wireless door lock control function)	ON	Function that turns wireless door lock function ON/OFF.	ON/OFF
ALARM FUNCTION (Panic function)	ON	Function that operates theft deterrent system when transmitter panic switch on transmitter is held for 0.8 seconds.	ON/OFF
UNLOCK/2OPER (2 times operation wireless unlock)	ON	Function that unlocks driver side door when unlock switch on transmitter is pressed once, and unlocks all doors when pressed twice. If on OFF setting, pressing unlock switch once makes all doors unlock.	ON/OFF
AUTO LOCK DELAY (Auto lock time)	30s	This function controls amount of time from unlocking doors to automatic re–locking function.	30s/60s
HAZARD ANS BACK (Hazard answer–back of wireless)	ON	When lock switch on transmitter is pressed, this function illuminates all hazard warning lamps once. when unlock switch is pressed, all hazard warning lamps illuminate twice.	ON/OFF