

## HOW TO PROCEED WITH TROUBLESHOOTING

The hand-held tester can be used at step 3, 6, 9, 12.

<b>1</b>	<b>Vehicle Brought to Workshop</b>
----------	------------------------------------




<b>2</b>	<b>Customer Problem Analysis (SEE PAGE 05-954)</b>
----------	--

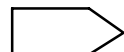


<b>3</b>	<b>Check and Clear DTCs and Freeze Frame Data (SEE PAGE 05-975)</b>
----------	---



<b>4</b>	<b>Problem Symptom Confirmation</b>
----------	-------------------------------------

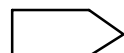
	Symptom does not occur: Go to step 5
---	--------------------------------------

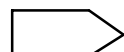
	Symptom occur: Go to step 6
---	-----------------------------

<b>5</b>	<b>Symptom Simulation (SEE PAGE 01-47)</b>
----------	--



<b>6</b>	<b>DTC Check (SEE PAGE 05-975)</b>
----------	------------------------------------

	There is no output: Go to step 7
---	----------------------------------

	There is output: Go to step 8
---	-------------------------------

<b>7</b>	<b>Problem Symptoms Table (SEE PAGE 05-966)</b>
----------	---

	Check for fluid leakage and Go to step 10
---	---

<b>8</b>	<b>DTC Chart (SEE PAGE 05-987)</b>
----------	------------------------------------



<b>9</b>	<b>Circuit Inspection (SEE PAGE 05-991 to 05-1136)</b>
----------	--



<b>10</b>	<b>Identification of Problem</b>
-----------	----------------------------------



11	Repair
----	--------



12	Confirmation Test
----	-------------------



End
-----