

DTC	B2277	DETECTING VEHICLE SUBMERSION
------------	--------------	-------------------------------------

CIRCUIT DESCRIPTION

This DTC is output when the submersion circuit monitor inside the power source control ECU detects that the vehicle is submerged in water.

DTC No.	DTC Detection Condition	Trouble Area
B2277	Submersion circuit monitor inside power source control ECU detects that vehicle is submerged in water	Power source control ECU

INSPECTION PROCEDURE

1	CHECK FOR DTCS
----------	-----------------------

- (a) Delete the DTC (see page [05-2438](#)).
- (b) Check for DTCs again.

OK: No DTC is output.

NG	REPLACE POWER SOURCE CONTROL ECU
-----------	---

OK

END
