


FAN AND GENERATOR V BELT (1NZ-FXE)

REPLACEMENT


1410L-01

1. REMOVE ENGINE UNDER COVER RH

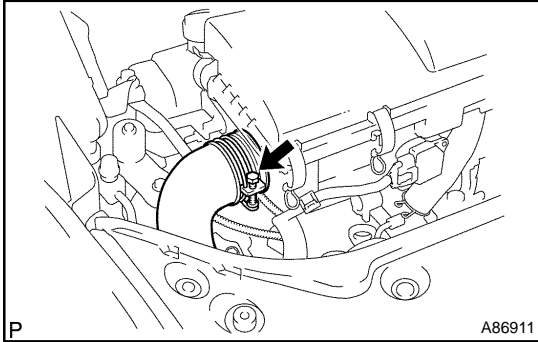


2. DISCONNECT AIR CLEANER INLET NO.1

- (a) Loosen the clamp, then disconnect the air cleaner inlet No. 1 from the air cleaner case.

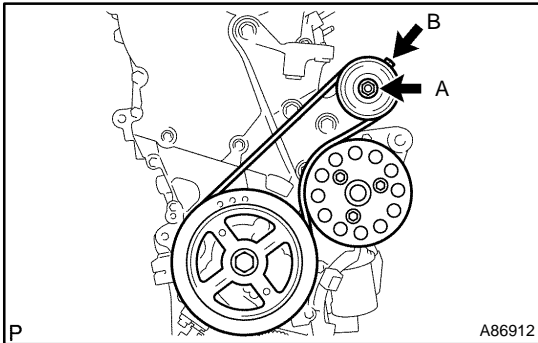

3. REMOVE FAN AND GENERATOR V BELT

- (a) Install the idler puller assembly, then loosen nut A.
 (b) Turn adjust bolt B, then relieve the V-ribbed belt tension to remove.

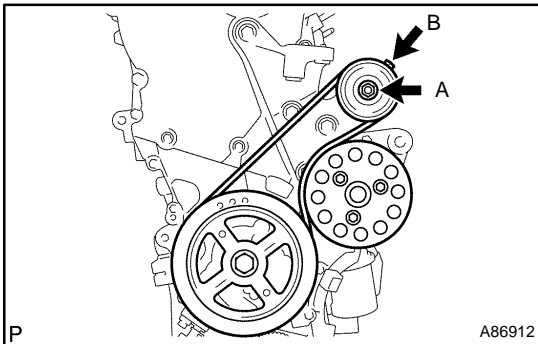

4. INSTALL FAN AND GENERATOR V BELT

- (a) Temporarily install the V-ribbed belt to each pulley.
 (b) Turn adjust bolt B to adjust the V-ribbed belt tension.
 (c) Install the idler pulley assembly, then tighten nut A.
Torque: 40 N·m (408 kgf·cm, 30 ft·lbf)

5. INSPECT DRIVE BELT DEFLECTION AND TENSION (See page 14-1)

6. CONNECT AIR CLEANER INLET NO.1

7. INSTALL ENGINE UNDER COVER RH