



REPLACEMENT

1. REMOVE REAR FLOOR BOARD NO.2 (See page 21-116)
2. REMOVE DECK FLOOR BOX REAR (See page 21-116)
3. REMOVE REAR FLOOR BOARD NO.3 (See page 21-116)
4. DISCONNECT BATTERY NEGATIVE TERMINAL (See page 21-116)
5. REMOVE RADIATOR SUPPORT OPENING COVER (See page 16-11)
6. REMOVE FRONT WHEEL LH
7. REMOVE ENGINE UNDER COVER LH
8. REMOVE FRONT FENDER LINER LH
 - (a) Remove the front fender liner LH partly.
9. DRAIN ENGINE COOLANT (See page 16-11)

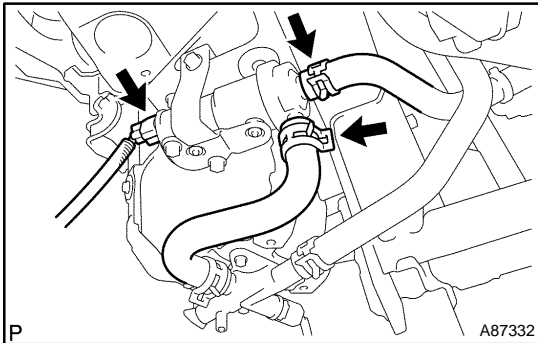

10. REMOVE COOLANT HEAT STORAGE WATER PUMP
 - (a) Disconnect the coolant heat storage water pump connector.
 - (b) Disconnect the 2 hoses shown in the illustration.

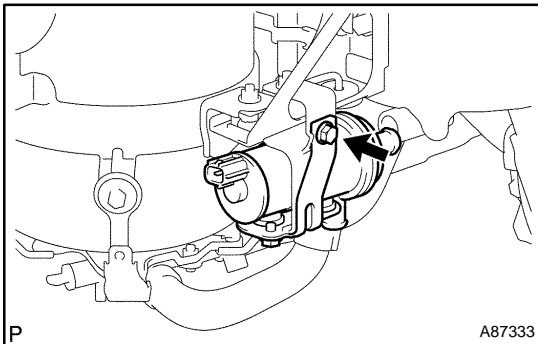

- (c) Remove the bolt and coolant heat storage water pump.

11. INSTALL COOLANT HEAT STORAGE WATER PUMP
Torque: 6.0 N·m (61 kgf·cm, 53 in·lbf)
12. CONNECT BATTERY NEGATIVE TERMINAL
Torque: 6.0 N·m (61 kgf·cm, 53 in·lbf)
13. INSTALL REAR FLOOR BOARD NO.3
14. INSTALL DECK FLOOR BOX REAR
15. INSTALL REAR FLOOR BOARD NO.2
16. ADD ENGINE COOLANT (See page 16-11)
17. CHECK FOR ENGINE COOLANT LEAKS
18. INSTALL FRONT FENDER LINER LH
19. INSTALL ENGINE UNDER COVER LH
20. INSTALL FRONT WHEEL LH
Torque: 103 N·m (1050 kgf·cm, 76 ft·lbf)
21. INSTALL RADIATOR SUPPORT OPENING COVER
22. POWER WINDOW CONTROL SYSTEM INITIALIZE (See page 01-28)