


## REAR SPEAKER ASSY NO.2 REPLACEMENT

6716L-01

### HINT:

- COMPONENTS: See page 67-2
  - Use the same procedures for the RH side and LH side.
  - The procedures listed below are for the LH side.
  - Installation is in the reverse order of removal.
1. REMOVE REAR DOOR INSIDE HANDLE BEZEL LH (SEE PAGE 75-22)
  2. REMOVE DOOR PULL HANDLE (SEE PAGE 75-22)
  3. REMOVE REAR DOOR ARMREST BASE PANEL UPPER LH (SEE PAGE 75-22)
  4. REMOVE REAR DOOR TRIM BOARD SUB-ASSY LH (SEE PAGE 75-22)

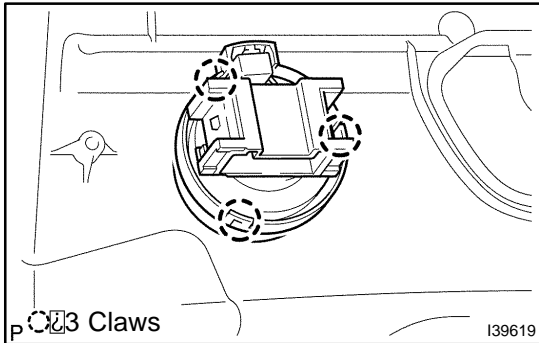

5. REMOVE REAR SPEAKER ASSY NO.2
  - (a) Disengage the 3 claws and remove the rear speaker assy No.2.