


# STEREO COMPONENT SPEAKER ASSY FRONT

## REPLACEMENT

6716M-01


### HINT:

- COMPONENTS: See page 67-2
- Installation is in the reverse order of removal.

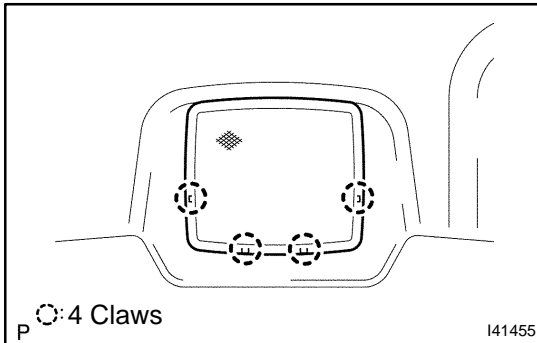

### 1. REMOVE STEREO COMPONENT SPEAKER ASSY FRONT

- Disengage the 4 claws and remove the instrument panel speaker panel.
- Disconnect the connector.

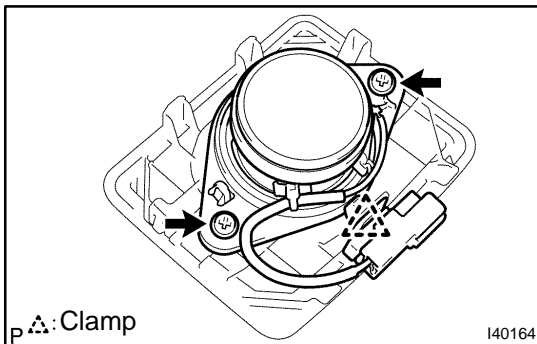

- Remove the 2 screws and disengage the clamp and then remove the stereo component speaker assy front.