

ANTENNA CORD SUB-ASSY REPLACEMENT

6716P-01

HINT:

- COMPONENTS: See page 67-2
- Installation is in the reverse order of removal.


1. REMOVE ROOF HEADLINING ASSY (SEE PAGE 76-28)

HINT:

Refer to the procedures up to "REMOVE ROOF HEAD LINING ASSY".


2. REMOVE ANTENNA CORD SUB-ASSY

- Disconnect each connector.
- Remove the 10 clamps and earth bolt to remove the antenna cord sub-assy.

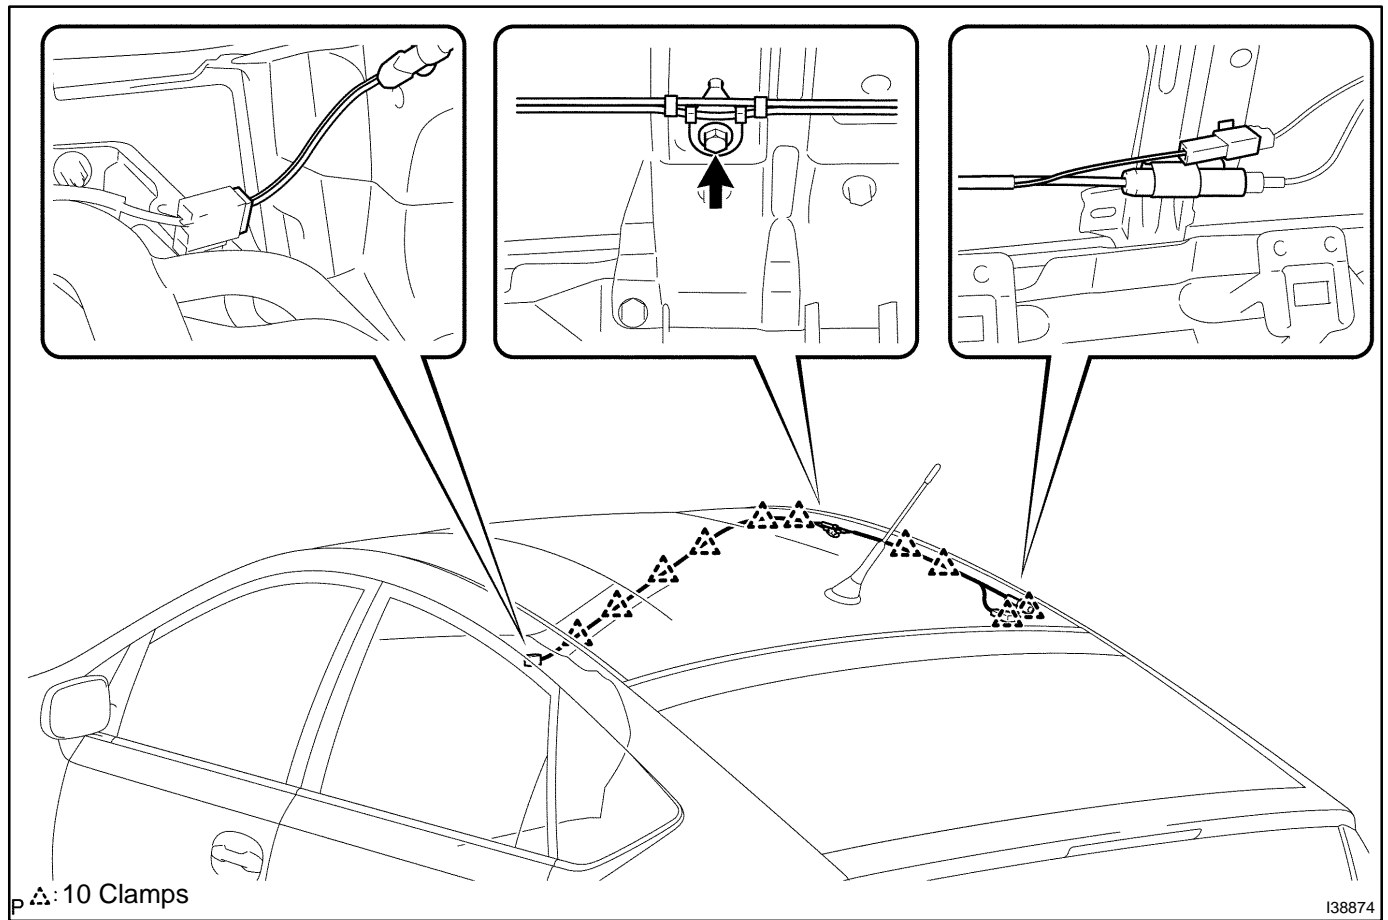

3. INSTALL ANTENNA CORD SUB-ASSY

- (a) Install the 10 clamps and bolt.
Torque: 7.0 N·m (71 kgf·cm, 62 in.-lbf)
- (b) Connect each connector.

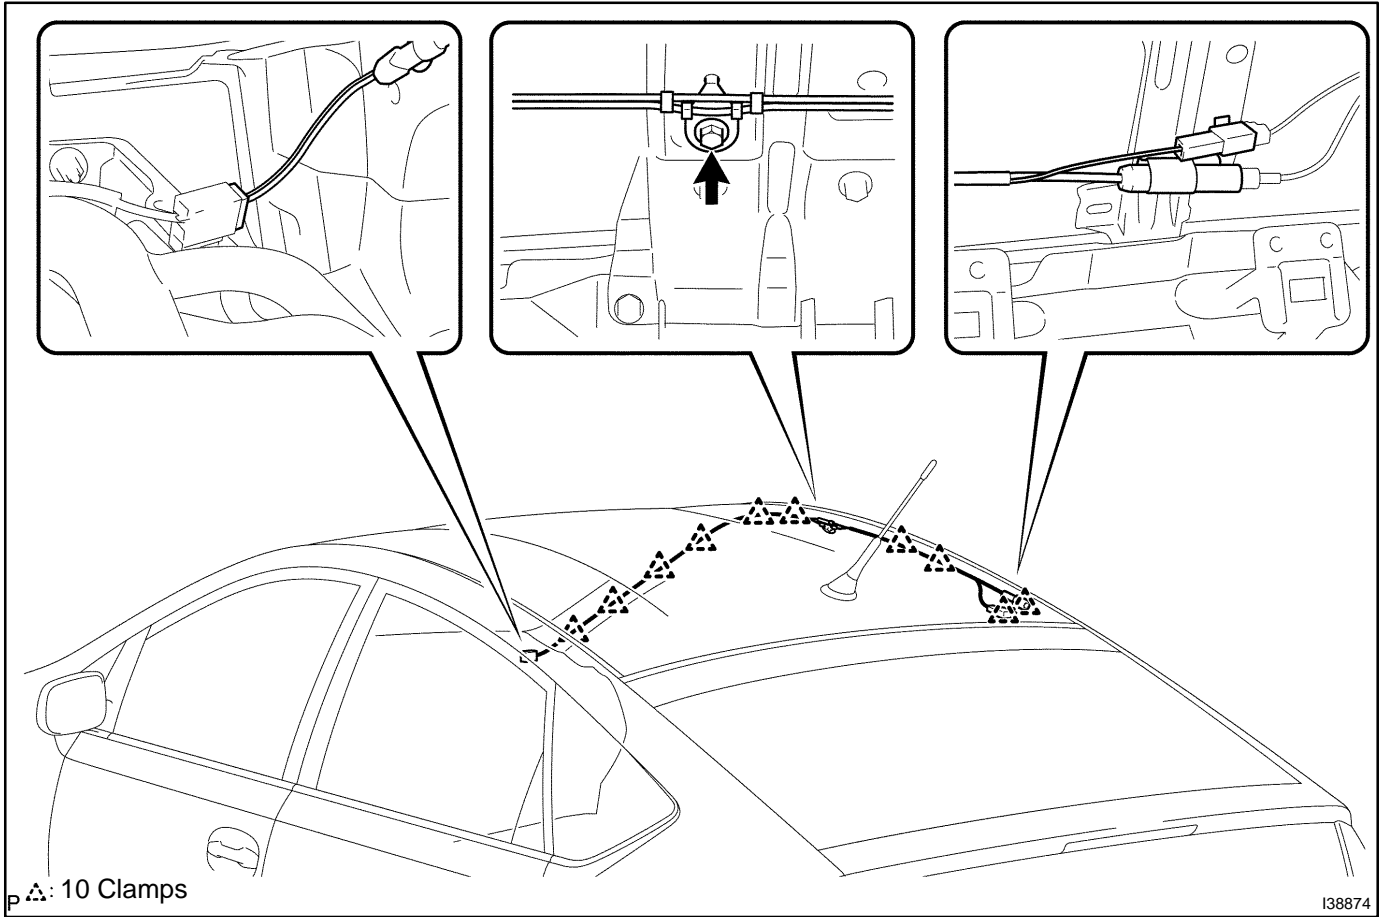**4. INSTALL ROOF HEADLINING ASSY (SEE PAGE 76-28)**

HINT:

Refer to the procedures from "INSTALL ROOF HEAD LINING ASSY".