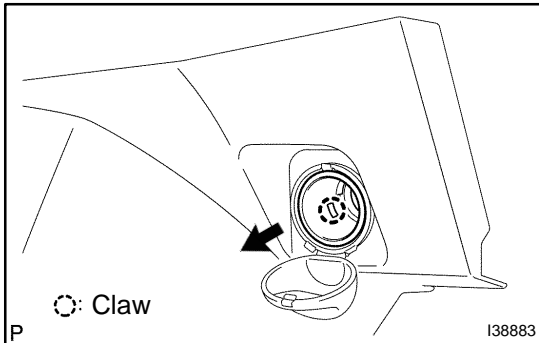


POWER POINT SOCKET ASSY REPLACEMENT

6716W-01

HINT:

COMPONENTS: See page [67-2](#)

1. REMOVE POWER POINT SOCKET ASSY

- (a) Disengage the claw to remove the power point socket assy.

2. INSTALL POWER POINT SOCKET ASSY

- (a) Align the power point socket assy and power point socket cover.
- (b) Insert them from the front side and install the power point socket assy.