

PROBLEM SYMPTOMS TABLE

Symptom	Suspected Area	See Page
Rear window defogger does not operate (Indicator ON)	1. DEFOG H-fuse 2. A/C (HTR) fuse 3. GAUGE fuse 4. DOME fuse 5. ECU-B fuse 6. DEF relay 7. Rear window defogger wire 8. Wire harness	70-36 70-36 70-36 70-36 70-36 70-41 70-41 –
Rear window defogger does not operate (Indicator OFF)	1. DEFOG H-fuse 2. A/C (HTR) fuse 3. GAUGE fuse 4. DOME fuse 5. ECU-B fuse 6. DEF relay 7. Combination meter 8. Steering wheel pad switch 9. Multi-display assy 10. Rear window defogger wire 11. Wire harness	70-36 70-36 70-36 70-36 70-36 70-41 05-1268 70-41 05-1268 70-41 –
Mirror heater does not operate (Indicator ON)	1. M/HTR fuse 2. A/C (HTR) fuse 3. GAUGE fuse 4. DOME fuse 5. ECU-B fuse 6. Mirror heater relay 7. Outer rear view mirror assy 8. Wire harness	70-36 70-36 70-36 70-36 70-36 70-41 70-41 –
Mirror heater does not operate (Indicator OFF)	1. M/HTR fuse 2. A/C (HTR) fuse 3. GAUGE fuse 4. DOME fuse 5. ECU-B fuse 6. Mirror heater relay 7. Combination meter 8. Steering wheel pad switch 9. Multi-display assy 10. Outer rear view mirror assy 11. Wire harness	70-36 70-36 70-36 70-36 70-36 70-41 05-1268 70-41 05-1268 70-41 –

HINT:

The window defogger system is part of the large-scale multiplex communication system. This system features shared communication wiring that reduces the wiring complexity of the communication lines. The first step in any repair is to confirm the proper operation of the communication system. Proceed with troubleshooting after the communication has been verified (see Multiplex Communication System).