REAR SEAT ASSY COMPONENTS

Rear Seatback Lock **Release Button** Rear Seat Headrest Assy Center Rear Seatback Stop Rear Seat Belt Assy **Button Grommet** Outer Center Rear Seat Shoulder Belt Cover Headrest Rear Seatback Rear Seatback Lock Support Lock Assy RH Release Button Rear Seat Headrest Assy 42 (428, 31) **Rear Seatback Stop** Button Grommet ക് 18.1 (185, 13) ø n **Rear Seatback** ø Rear Seatback Rear Seat Shoulder Cover Lock Assy LH Belt Guide Center Rear Seat Headrest Assy Headrest Support P Rear Side Seatback 42 (428, 31) Assy RH Hog Ring Rear Seat Shoulder Ċ Belt Guide Center 18.1 (185, 13) ę Headrest Support Ś **Rear Seatback Cover** Rear Seatback O Frame RH Rear Seatback Hinge Sub-assy RH € X 5 Ć ♦ Clip Rear Seatback 18.1 (185, 13) 36.8 (375, 27) Rear Seatback Pad RH **%** Frame LH Rear Seatback Cover RH Clip 18.1 (185, 13) e ര 36.8 (375, 27) Clip C Ю́ x 5 എ Rear Seatback Center Armrest **Rear Seat Armrest** Pad LH Hinge Cover Assy Center -🔊 🔶 Clip Rear Seatback Hinge Sub-assy Center 36.8 (375, 27) Rear Seatback Cover LH Hog Ring Rear Side Seatback 18.1 (185, 13) Ð Assy LH Rear Seatback Hinge Rear Seat Cushion Cover Sub-assy LH Hog Ring Rear Seat Cushion Pad N·m (kgf·cm, ft·lbf) : Specified torque B76027 ◆ Non-reusable part B76027

720RW-01