

HOW TO TROUBLESHOOT ECU CONTROLLED SYSTEMS

GENERAL INFORMATION

010S3-01

A large number of ECU controlled systems are used in the PRIUS. In general, ECU controlled systems are considered to be very intricate, requiring a high level of technical knowledge to troubleshoot. However, most problem checking procedures only involve inspecting the ECU controlled system's circuits one by one. An adequate understanding of the system and a basic knowledge of electricity is enough to perform effective troubleshooting, accurate diagnoses and necessary repairs. Detailed information and troubleshooting procedures on major ECU controlled systems in this vehicle are outlined below:

System	Page
1. SFI System	05-1
2. Hybrid Control System	05-385
3. Hybrid Battery System	05-863
4. Electronically Controlled Brake System	05-943
5. Shift Control System (Parking Lock Control)	05-1139
6. Electronic Power Steering System	05-1203
7. Air Conditioning System	05-1247
8. Supplemental Restraint System	05-1384
9. Lighting System	05-1659
10. Audio System	05-1751
11. Navigation System	05-1841
12. Combination Meter	05-1975
13. Power Window Control System	05-2020
14. Power Door Lock Control System	05-2070
15. Smart Entry System	05-2135
16. Wireless Door Lock Control System (w/ Smart Entry System)	05-2223
17. Wireless Door Lock Control System (w/o Smart Entry System)	05-2267
18. Push Button Start System	05-2420
19. Key Reminder Warning System	05-2307
20. Engine Immobilizer System (w/ Smart Entry System)	05-2325
21. Engine Immobilizer System (w/o Smart Entry System)	05-2375
22. Theft Deterrent System	05-2494
23. Multiplex Communication System	05-2537
24. CAN Communication System	05-2596
25. Cruise Control System	05-2679

FOR USING OBD II SCAN TOOL OR HAND-HELD TESTER

- Before using the scan tool or tester, the scan tool's instruction book or tester's operator manual should be read thoroughly.
- If the scan tool or tester cannot communicate with the ECU controlled systems when you have connected the cable of the tester to the DLC3 with the power switch and tester turned ON, there is a problem on the vehicle side or tester side.
 - (1) If communication is normal when the tester is connected to another vehicle, inspect the diagnosis data link line (Bus \oplus line) or ECU power circuit of the vehicle.
 - (2) If communication is still impossible when the tester is connected to another vehicle, the problem is probably in the tester itself. Perform the Self Test procedures outlined in the Tester Operator's Manual.