

DTC	P0607	CONTROL MODULE PERFORMANCE
------------	--------------	-----------------------------------

CIRCUIT DESCRIPTION

DTC 0607 is stored when an internal abnormality of the hybrid vehicle control ECU is detected.

DTC No.	DTC Detecting Condition	Trouble Area
P0607	The hybrid vehicle control ECU has a supervisory CPU and a control CPU inside. This trouble code is output when input STP signals to each CPU are different for 0.15 sec. or more.	Hybrid vehicle control ECU

HINT:

If DTC P0607 is detected while the cruise control is in operation, the system clears the stored vehicle speed in the hybrid vehicle control ECU and cancels the cruise control operation. At the same time, the CRUISE main indicator light blinks to inform the driver of the malfunction.

When this trouble code is detected, fail-safe remains on until the power switch is turned off.

INSPECTION PROCEDURE

1	REPLACE HYBRID VEHICLE CONTROL ECU (SEE PAGE 21-124)
----------	-----------------------------------------------------------------------------