

PROBLEM SYMPTOMS TABLE

Symptoms	Suspected Area	See Page
Power mode does not change to ON (IG and ACC)	<ul style="list-style-type: none"> • Power source control ECU • AM1 fuse • AM2 fuse • Power switch • Key slot • Wire harness 	05-2473
Power mode does not change to ON (ACC)	<ul style="list-style-type: none"> • Power source control ECU • AM1 fuse • AM2 fuse • ACC Relay • Wire harness 	05-2479
Power mode does not change to ON (IG)	<ul style="list-style-type: none"> • Power source control ECU • AM1 fuse • AM2 fuse • IG1 relay • IG2 relay • Wire harness 	05-2483
Power mode does not change to ON (READY)	<ul style="list-style-type: none"> • Power source control ECU • Stop lamp switch assy • Wire harness 	05-2488