

DTC	P3004/133	HIGH VOLTAGE POWER RESOURCE MALFUNCTION
------------	------------------	--

CIRCUIT DESCRIPTION

The HV control ECU gives warning to the driver and performs the fail-safe control, according to the abnormal signal received from the battery ECU.

DTC No.	INF Code	DTC Detection Condition	Trouble Area
P3004	133	Abnormal signal input from battery ECU	<ul style="list-style-type: none"> • HV battery system • Battery ECU

INSPECTION PROCEDURE

1	READ OUTPUT DTC(HV BATTERY)
----------	------------------------------------

- (a) Connect the hand-held tester to the DLC3.
- (b) Turn the power switch ON (IG).
- (c) Turn the hand-held tester ON.
- (d) On the hand-held tester, enter the following menus: DIAGNOSIS / ENHANCED OBD II / HV BATTERY / DTC INFO / TROUBLE CODES.
- (e) Read DTCs.

Result: DTCs are output

YES

GO TO RELEVANT DTC CHART
(See page [05-893](#))

NO

REPLACE BATTERY ECU ASSY (See page [21-98](#))