


INSPECTION

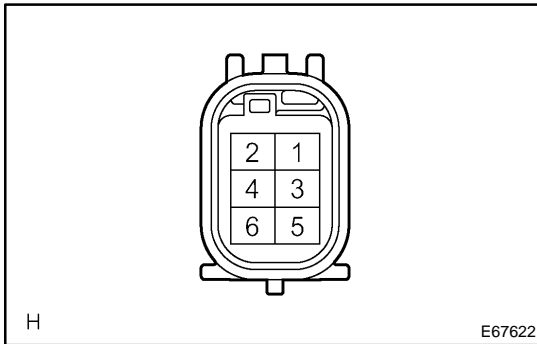


1. INSPECT OUTSIDE DOOR HANDLE

- (a) Remove the outside door handle (see page 75-9).
- (b) Check the resistance between the terminals of the connector when the switch is operated.

Standard:

Switch Condition	Tester Connection	Specified Condition
Switch pushed	1 – 3	Below 1 Ω
Switch not pushed	1 – 3	10 k Ω or higher

If the result is not as specified, replace the outside door handle.

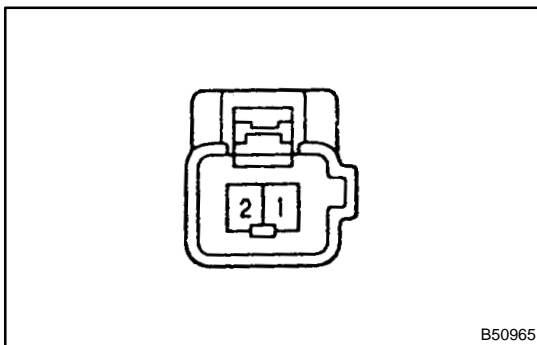

2. INSPECT SMART KEY CANCEL SWITCH

- (a) Remove the outside door handle.
- (b) Check the resistance between the terminals of the connector when the switch is operated.

Standard:

Switch Condition	Tester Connection	Specified Condition
Switch pushed	1 – 2	Below 1 Ω
Switch not pushed	1 – 2	10 k Ω or higher

If the result is not as specified, replace the smart system cancel switch.