


# CHARCOAL CANISTER VACUUM SWITCHING VALVE (1NZ-FXE)

## REPLACEMENT


120DR-01

1. REMOVE REAR FLOOR BOARD NO.2 (See page 19-2)
2. REMOVE DECK FLOOR BOX REAR (See page 19-2)
3. REMOVE REAR FLOOR BOARD NO.3 (See page 19-2)
4. DISCONNECT ENGINE WIRE NO.3 (BATTERY NEGATIVE TERMINAL) (See page 19-2)

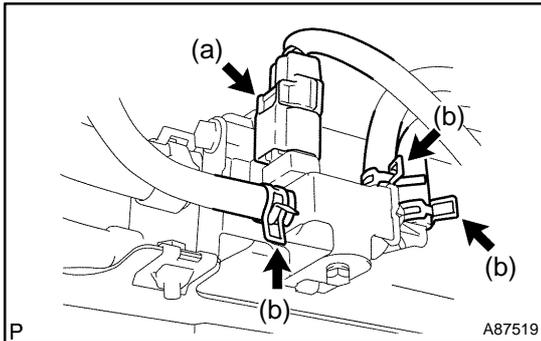

### 5. REMOVE CHARCOAL CANISTER VACUUM SWITCHING VALVE

- (a) Disconnect the VSV connector.
- (b) Disconnect the 3 charcoal canister hoses from the charcoal canister vacuum switching valve.

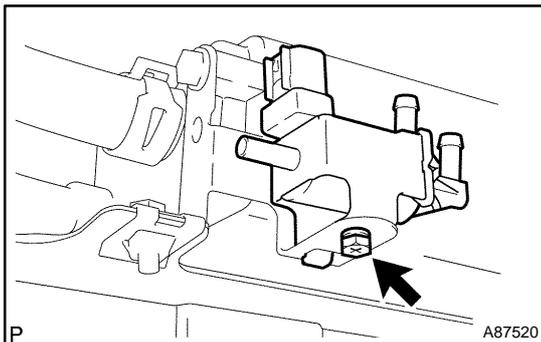

- (c) Remove the bolt, then remove the charcoal canister vacuum switching valve.

6. INSTALL CHARCOAL CANISTER VACUUM SWITCHING VALVE  
Torque: 2.9 N·m (30 kgf·cm, 26 in·lbf)
7. CONNECT ENGINE WIRE NO.3 (BATTERY NEGATIVE TERMINAL) (See page 19-2)
8. INSTALL REAR FLOOR BOARD NO.3
9. INSTALL DECK FLOOR BOX REAR
10. INSTALL REAR FLOOR BOARD NO.2
11. POWER WINDOW CONTROL SYSTEM INITIALIZE (See page 01-28)