



# OVERHAUL

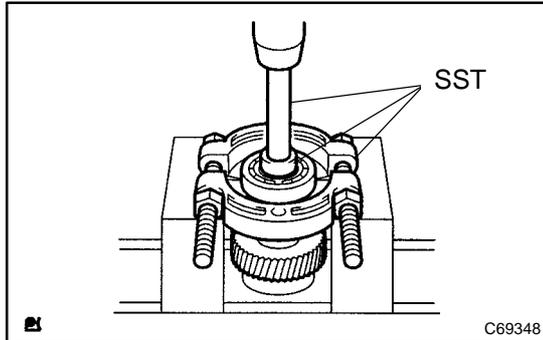

## 1. REMOVE COUNTER DRIVE GEAR RADIAL BALL BEARING

(a) Using SST and a press, remove the bearing from the counter drive gear.

SST 09950-00020, 09950-60010 (09951-00330),  
09950-70010 (09951-07100)

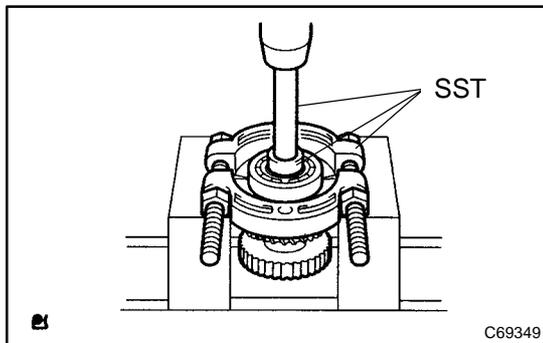

(b) Using SST and a press, remove the bearing from the counter drive gear.


SST 09950-00020, 09950-60010 (09951-00330),  
09950-70010 (09951-07100)

## 2. INSPECT COUNTER DRIVE GEAR RADIAL BALL BEARING

(a) Check the bearing for abnormal wear or color change.

HINT:


Replace the bearing with a new one if abnormal wear or color change is observed.

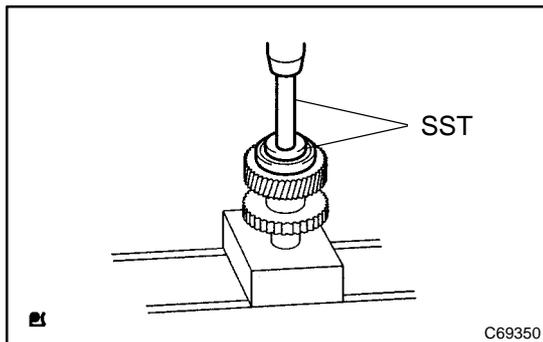

## 3. INSTALL COUNTER DRIVE GEAR RADIAL BALL BEARING

(a) Using SST and a press, install a new bearing into the counter drive gear.

SST 09950-60010 (09951-00330, 09951-00460),  
09950-70010 (09951-07100)

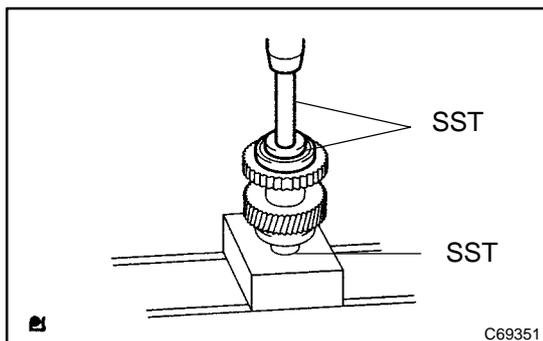

(b) Using SST and a press, install a new bearing into the counter drive gear.

SST 09950-60010 (09951-00330, 09951-00460),  
09950-70010 (09951-07100)