

REPLACEMENT

HINT:

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.


1. **PRECAUTION (SEE PAGE 60-1)**
2. **DISCONNECT BATTERY NEGATIVE TERMINAL (SEE PAGE 60-1)**
3. **REMOVE ROOF HEADLINING ASSY (SEE PAGE 76-28)**
4. **REMOVE CURTAIN SHIELD AIRBAG ASSY**

(a) Disconnect the connector from the curtain shield airbag assy.

NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

- (b) Remove the 3 clips.
- (c) Remove the 9 bolts and the curtain shield airbag assy in the order shown in the illustration.

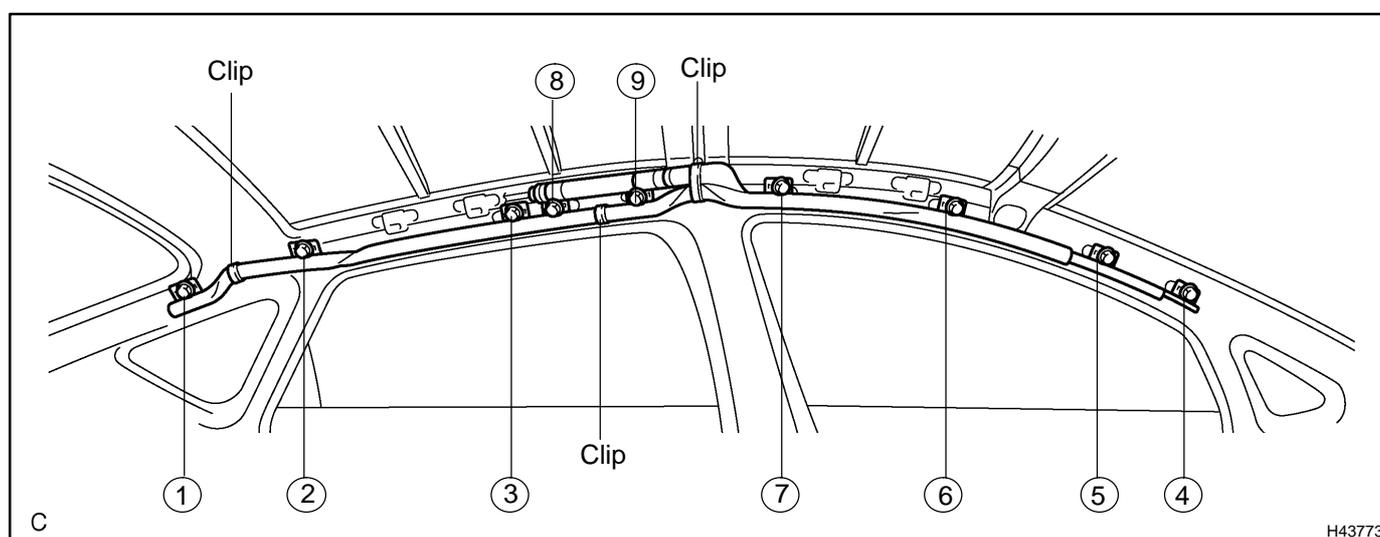


5. **INSPECT CURTAIN SHIELD AIRBAG ASSY (SEE PAGE 60-14)**

6. INSTALL CURTAIN SHIELD AIRBAG ASSY

- (a) Install the curtain shield airbag assy with the 9 bolts in the order shown in the illustration.
Torque: 14 N·m (143 kgf·cm, 10 ft·lbf)
- (b) Install the 3 clips.
- (c) Connect the connector to the curtain shield airbag assy.

NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

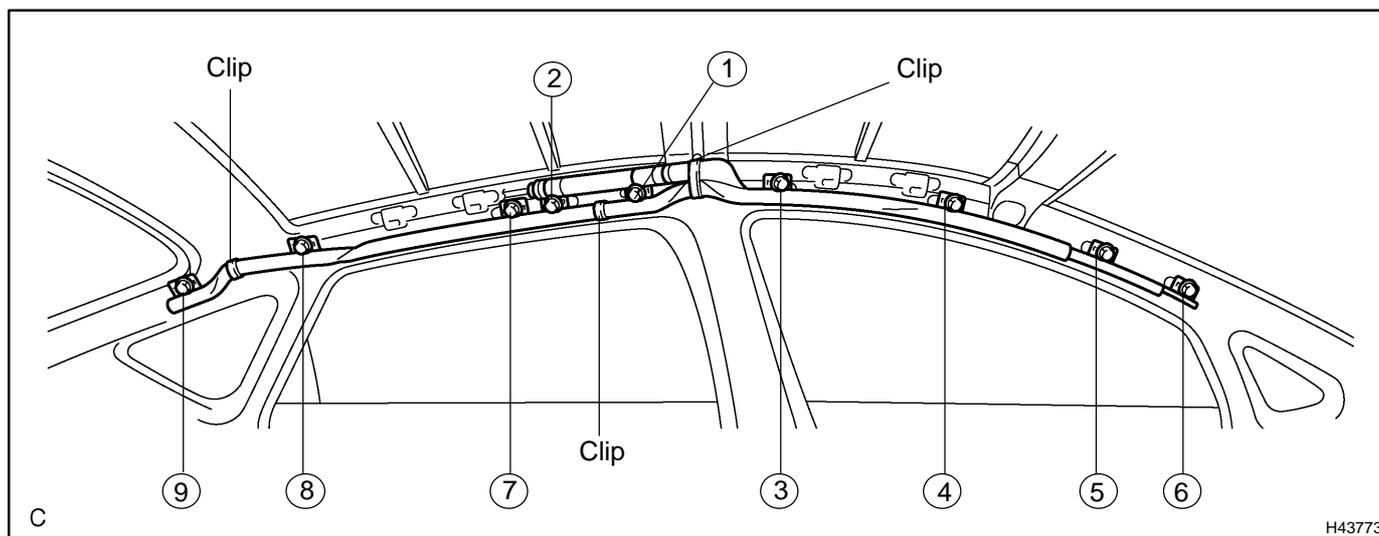**7. INSTALL ROOF HEADLINING ASSY (SEE PAGE 76-28)****8. CONNECT BATTERY NEGATIVE TERMINAL****NOTICE:**

When disconnecting the negative (-) battery terminal, initialize the following systems after the terminal is reconnected.

System Name	See Page
Power Window Control System	01-28

9. INSPECT SRS WARNING LIGHT (SEE PAGE 05-1397)