


HEIGHT CONTROL SENSOR SUB-ASSY REAR REPLACEMENT

65128-01

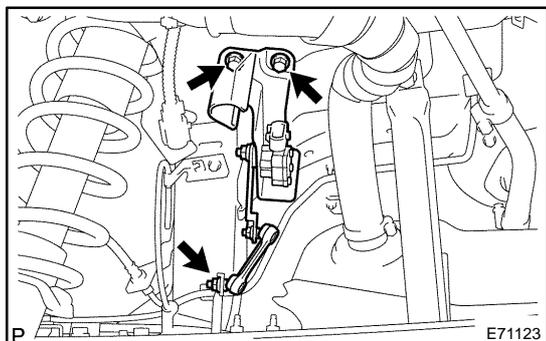

1. **REMOVE HEIGHT CONTROL SENSOR SUB-ASSY REAR**
 - (a) Disconnect the connector.
 - (b) Remove the nut and separate the height control sensor link from the rear axle beam.
 - (c) Remove the 2 bolts and the height control sensor rear.

2. **PERFORM INITIALIZATION (SEE PAGE 05-1675)**
3. **HEADLIGHT AIM ONLY (SEE PAGE 65-16)**