


POWER POINT SOCKET ASSY RR REPLACEMENT

6716X-01

HINT:

COMPONENTS: See page 67-2

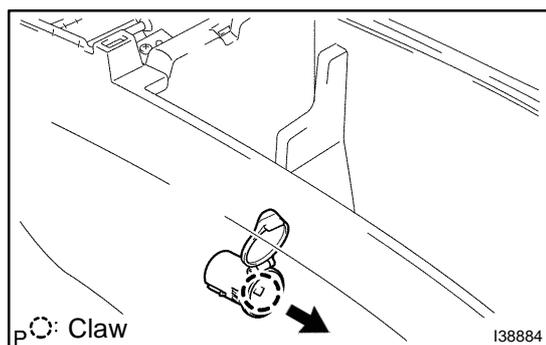

1. REMOVE POWER POINT SOCKET ASSY RR

- (a) Disengage the claw to remove the power point socket assy RR.

2. INSTALL POWER POINT SOCKET ASSY RR

- (a) Align the power point socket assy RR and power point socket cover.
- (b) Insert them from the front side and install the power point socket assy RR.