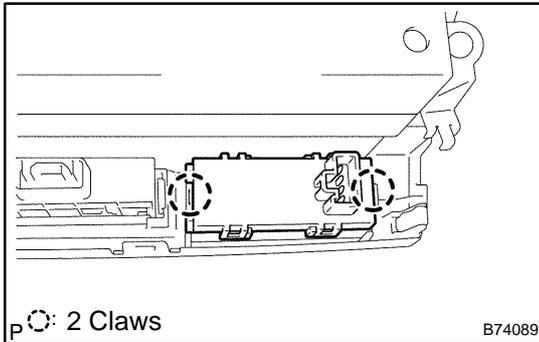


# CLOCK ASSY REPLACEMENT

710LS-01

**HINT:**

- Installation is in the reverse order of removal.
  - COMPONENTS: SEE PAGE 71-1
1. REMOVE INSTRUMENT PANEL REGISTER ASSY NO.1 (SEE PAGE 71-7)
  2. REMOVE INSTRUMENT PANEL FINISH PANEL SUB-ASSY LOWER (SEE PAGE 71-7)
  3. REMOVE INSTRUMENT PANEL FINISH PANEL SUB-ASSY UPPER (SEE PAGE 71-7)
  4. REMOVE INSTRUMENT PANEL REGISTER ASSY NO.3 (SEE PAGE 71-7)
  5. REMOVE INSTRUMENT PANEL REGISTER ASSY NO.4 (SEE PAGE 71-7)
  6. REMOVE MULTI-DISPLAY ASSY (SEE PAGE 67-7)

**7. REMOVE CLOCK ASSY**

- (a) Disengage the 2 claws and then remove the clock assy.