
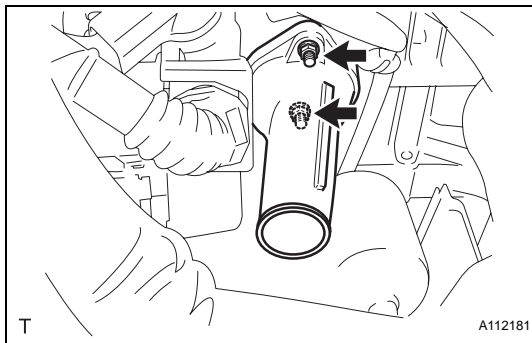


INSTALLATION

1. INSTALL THERMOSTAT

- (a) Install a new gasket onto the thermostat.
- (b) Install the thermostat with the jiggle valve upward.
HINT:
The jiggle valve may be set to within 10° on either side of the prescribed position.

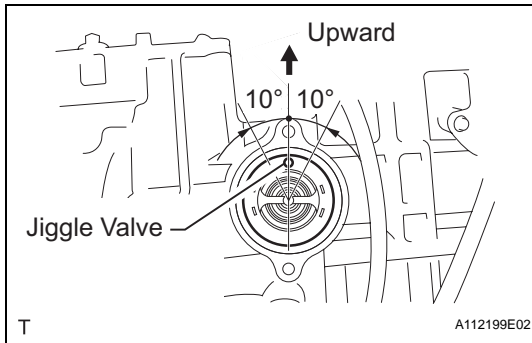

2. INSTALL WATER INLET

- (a) Install the water inlet with the 2 nuts.
Torque: 9.0 N*m (92 kgf*cm, 80 in.*lbf)

3. CONNECT NO. 2 RADIATOR HOSE

4. ADD ENGINE COOLANT (See page [CO-6](#))

5. CHECK FOR ENGINE COOLANT LEAKS (See page [CO-1](#))

6. INSTALL RADIATOR SUPPORT OPENING COVER

7. INSTALL NO. 1 ENGINE UNDER COVER