

**DTC****P0630****VIN not Programmed or Mismatch - ECM / PCM****DESCRIPTION**

DTC P0630 is set when the Vehicle Identification Number (VIN) is not stored in the Engine Control Module (ECM) or the input VIN is incorrect. Input the VIN with the intelligent tester.

DTC No.	DTC Detection Conditions	Trouble Areas
P0630	<ul style="list-style-type: none"> <li>VIN not stored in ECM</li> <li>Input VIN incorrect (1 trip detection logic)</li> </ul>	ECM

**MONITOR STRATEGY**

Related DTCs	P0630: VIN not programmed
Required Sensors/Components (Main)	ECM
Required Sensors/Components (Related)	-
Frequency of Operation	Continuous
Duration	0.325 seconds
MIL Operation	Immediate
Sequence of Operation	None

**ES****TYPICAL ENABLING CONDITIONS**

Battery voltage	8 V or more
Ignition switch	ON
Starter	OFF

**TYPICAL MALFUNCTION THRESHOLDS**

VIN code	Not programmed
----------	----------------

**COMPONENT OPERATING RANGE**

VIN code	Programmed
----------	------------

**INSPECTION PROCEDURE****1****READ CURRENT DTC**

- Connect the intelligent tester to the DLC3.
- Turn the ignition switch ON and turn the tester ON.
- Select the following menu items: DIAGNOSIS / ENHANCED OBD II / DTC INFO / CURRENT CODES.
- Read DTCs.

**Result**

Display (DTC Output)	Proceed To
P0630	A
P0630 and other DTCs	B

If any DTCs other than P0630 are output, troubleshoot those DTCs first.

**NOTICE:**  
If P0630 is set, the VIN must be input to the ECM using the intelligent tester. However, all DTCs are cleared automatically by the tester when the VIN is input. If DTCs other than P0630 are set, check them first.

**B** **GO TO DTC CHART**

**A**

**2** **INPUT VIN WITH INTELLIGENT TESTER**

(a) Refer to the REGISTRATION (see page [ES-14](#)).

**ES**

**NEXT**

**END**