REMOVAL

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.


- 2. REMOVE AIR CLEANER CAP (See page EM-23)
- 3. REMOVE AIR CLEANER CASE (See page EM-23)

4. REMOVE ECM

A124570


(a) Remove the 3 bolts of the ECM bracket.


Lock

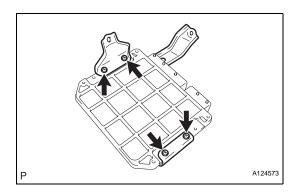


- (b) Disconnect the 2 ECM connectors.
 NOTICE:
 After disconnecting the connector, make sure that dirt, water and other foreign matter does not
 - contact the connecting part of the connector.
 (1) Raise the 2 levers while pushing the locks on the 2 levers, and disconnect the 2 ECM connectors.
- (c) Remove the ECM with bracket.

(d) Remove the 4 screws and 2 ECM brackets.

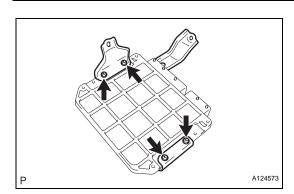

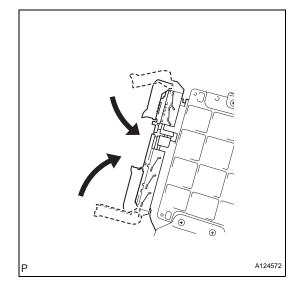

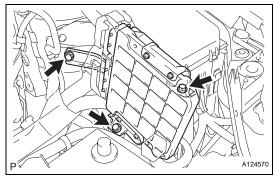

INSTALLATION

1. INSTALL ECM

(a) Install the 2 brackets to the ECM with the 4 screws.
 Torque: 3.0 N*m (30 kgf*cm, 27 in.*lbf)

(b) Connect the 2 ECM connectors.
 NOTICE:
 When connecting the connector, make sure that dirt, water and other foreign matter does not become stuck between the connector and other part.



 Connect the 2 ECM connectors and lower the 2 levers.

NOTICE:

Make sure that the 2 levers are securely lowered.

- (c) Install the ECM with the 3 bolts.
 Torque: 6.5 N*m (66 kgf*cm, 57 in.*lbf)
- 2. INSTALL AIR CLEANER CASE (See page EM-39)
- 3. INSTALL AIR CLEANER CAP (See page EM-39)
- 4. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

5. PERFORM REGISTRATION

- (a) When replacing the ECM, the Vehicle Identification Number (VIN) must be input into the replacement the new ECM (see page ES-14).
- (b) When replacing the ECM, perform the vehicle stability control system recognition in the ECM (see page CC-12).

6. RESET MEMORY

- (a) 2WD: When replacing the ECM, perform the RESET MEMORY procedure (A/T initialization) (see page AX-20).
- (b) 4WD:

When replacing the ECM, perform the RESET MEMORY procedure (A/T initialization) (see page AX-20).