

IG2 RELAY

ON-VEHICLE INSPECTION

1. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.

2. **REMOVE IG2 RELAY**

- (a) Remove the engine room No. 1 relay block cover.
- (b) Remove the IG2 relay from the engine room No. 1 relay block.

3. **INSPECT IG2 RELAY**

- (a) Measure the resistance of the IG2 relay.

Standard resistance

Tester Connection	Specified Condition
3 - 5	10 k Ω or higher
3 - 5	Below 1 Ω (when battery voltage is applied to terminals 1 and 2)

If the result is not as specified, replace the relay.

4. **INSTALL IG2 RELAY**

5. **CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**

ES

