
Fl

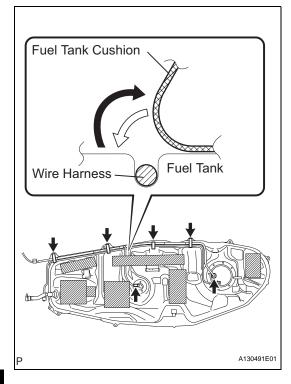

# INSTALLATION


# 1. INSTALL FUEL TANK ASSEMBLY

- (a) Set the fuel tank on a mission jack.
- (b) Raise the mission jack.
- (c) Fold back the 2 cushion rubbers.
- (d) Connect the fuel pump connector and sender gauge connector to the fuel tank.
   NOTICE:


## Be careful not to cut the wirings.


(e) Attach the wire harness to the 4 clamps.


- (f) Install the 3 fuel tank bands with the 6 bolts. Torque: 40 N\*m (408 kgf\*cm, 30 ft.\*lbf)
- 2. INSTALL FUEL TANK FILLER PIPE
  - (a) Install the filler pipe with the 2 bolts.
     Torque: 23.5 N\*m (240 kgf\*cm, 17 ft.\*lbf)
  - (b) Install the filler pipe protector with the 3 bolts.
- 3. CONNECT FUEL TANK TO FILLER PIPE HOSE
  - (a) Connect the filler pipe hose to the fuel tank.

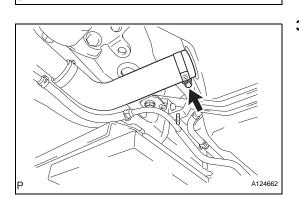

A124665

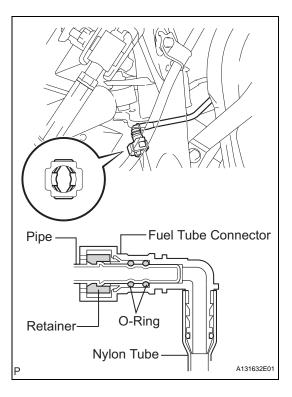

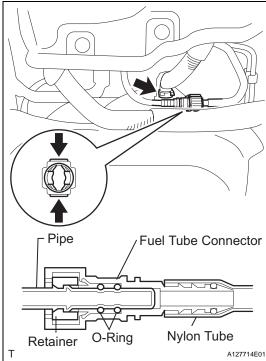

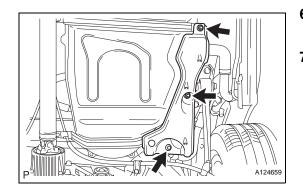

- 4. CONNECT FUEL TANK BREATHER HOSE
  - (a) Connect the fuel tank breather hose to the fuel tank. **NOTICE:** 
    - Before installing the tube connector to the pipe, check the connector for damage and foreign matter.
    - Check that the connector and pipe are securely connected by trying to pull them apart.
- 5. CONNECT FUEL TANK MAIN TUBE SUB-ASSEMBLY NOTICE:

Before installing the tube connector to the pipe, check the connector for damage and foreign matter.

(a) Connect the main tube connector to the pipe. Push the 2 parts together firmly until a "click" sound is heard.

#### NOTICE:

Check that the connector and pipe are securely connected by trying to pull them apart.

(b) Connect the EVAP hose to the fuel tank.

## 6. INSTALL NO. 1 FLOOR UNDER COVER


(a) Install the floor cover with the clip and 2 nuts.

## 7. INSTALL FRONT FLOOR COVER

(a) Install the floor under cover with the 3 clips, bolt and nut.

FU

FU

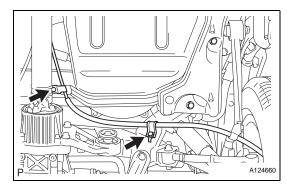

- 8. INSTALL NO. 2 PARKING BRAKE CABLE ASSEMBLY

   (a) Install the parking brake cable with the 2 bolts.
- 9. INSTALL FUEL TANK CAP
- 10. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL
- 11. CHECK FOR FUEL LEAKS