



INSTALLATION

1. INSTALL IGNITION SWITCH ASSEMBLY

(a) Install the ignition switch with the 2 screws.

(b) Connect the ignition key cylinder light connector.

(c) Connect the ignition switch connector.

2. INSTALL STEERING COLUMN COVER LOWER

(a) Install the steering column cover lower (see page [SR-20](#)).

3. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

