


IGNITION SWITCH COMPONENTS

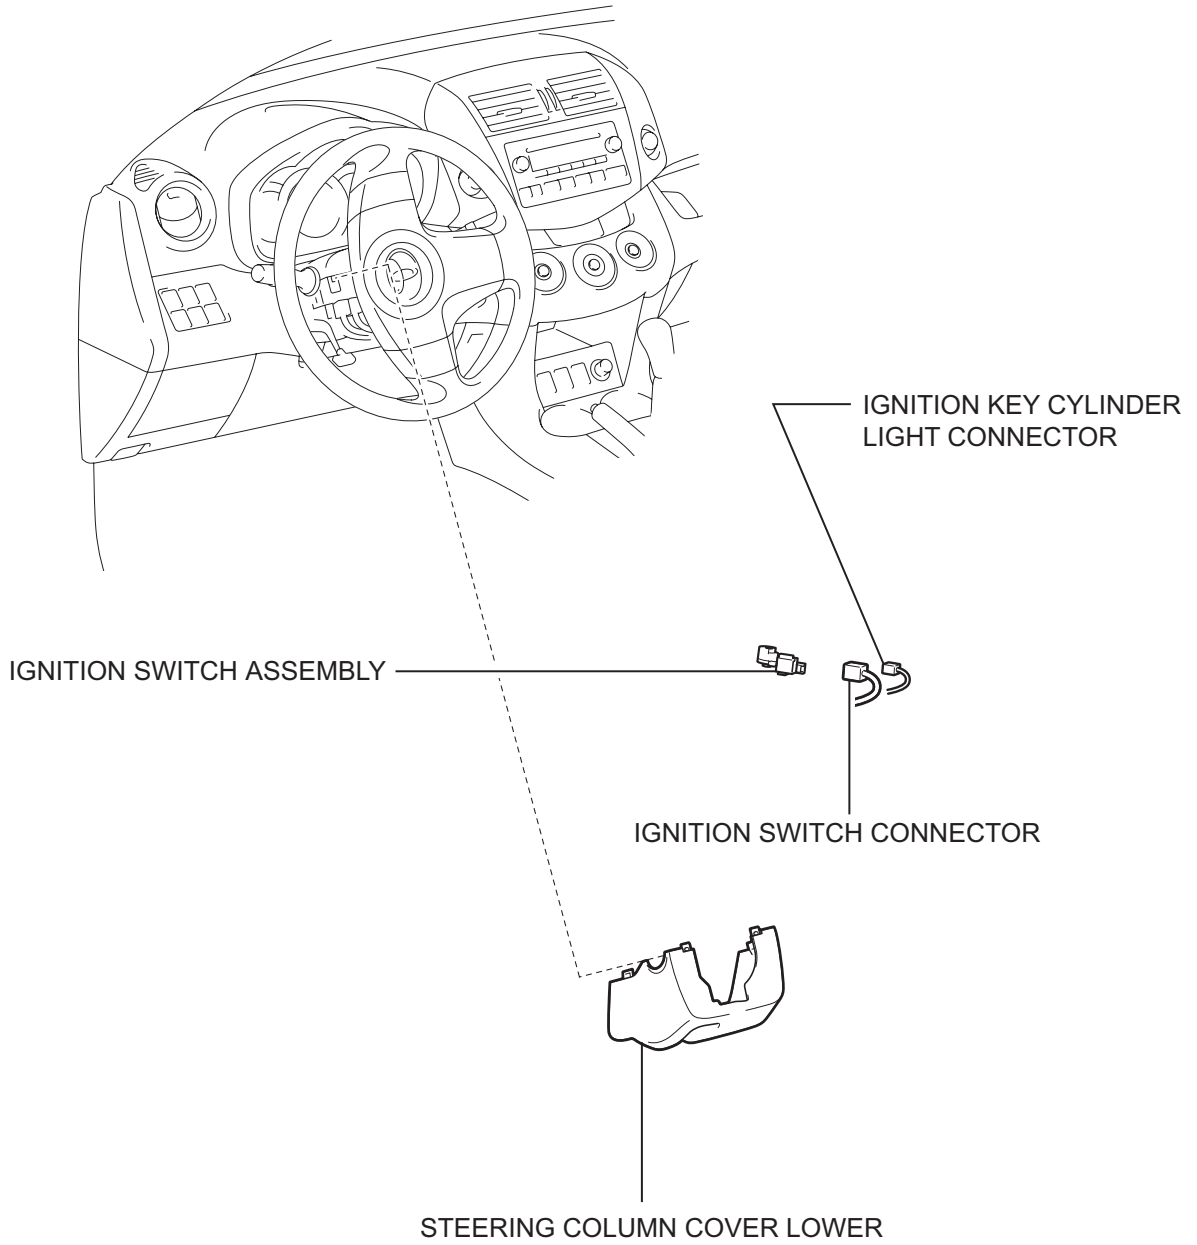

REMOVAL

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:



Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.

2. REMOVE STEERING COLUMN COVER LOWER


(a) Remove the steering column cover lower (see page [SR-12](#)).

3. REMOVE IGNITION SWITCH ASSEMBLY

(a) Disconnect the ignition switch connector.

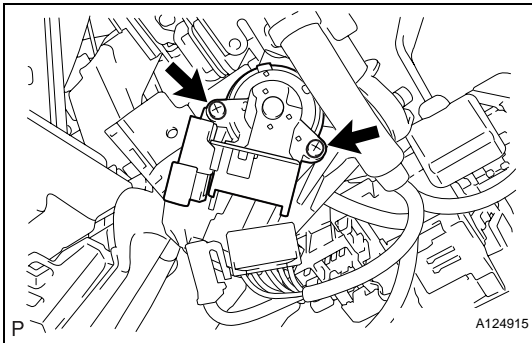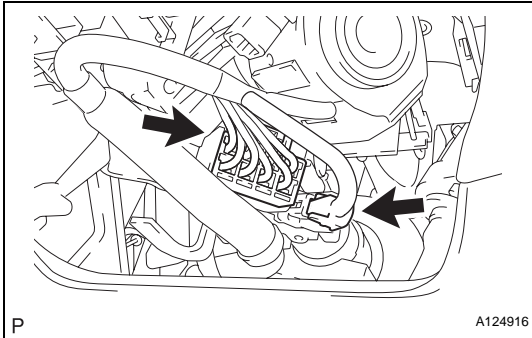

(b) Disconnect the ignition key cylinder light connector.
 (c) Remove the 2 screws and ignition switch.

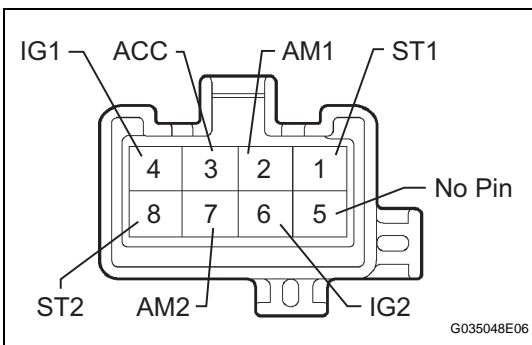

INSPECTION

1. INSPECT IGNITION SWITCH ASSEMBLY

(a) Measure the resistance of the switch.

Standard resistance

Tester Connection	Switch Condition	Specified Condition
-	LOCK	10 k Ω or higher
2 (AM1) - 3 (ACC)	ACC	Below 1 Ω
2 (AM1) - 3 (ACC) 2 (AM1) - 4 (IG1) 6 (IG2) - 7 (AM2)	ON	Below 1 Ω
1 (ST1) - 2 (AM1) 1 (ST1) - 4 (IG1) 6 (IG2) - 7 (AM2) 6 (IG2) - 8 (ST2)	START	Below 1 Ω

If the result is not as specified, replace the switch assembly.