

# STARTER RELAY

## ON-VEHICLE INSPECTION

1. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**

**CAUTION:**

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.

2. **REMOVE STARTER RELAY (Marking: ST)**
  - (a) Remove the starter relay from the No. 7 relay block.

3. **INSPECT STARTER RELAY (Marking: ST)**

- (a) Measure the resistance of the relay.

**Standard resistance**

Tester Connection	Specified Condition
3 - 5	10 k $\Omega$ or higher
3 - 5	Below 1 $\Omega$ (when battery voltage is applied to terminals 1 and 2)

If the resistance is not as specified, replace the relay.

4. **INSTALL STARTER RELAY (Marking: ST)**

5. **CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**

