

## **INSTALLATION**

- 1. INSTALL AIR OUTLET CONTROL SERVO MOTOR**  
(See page [AC-196](#))
- 2. INSTALL AIR CONDITIONING UNIT**
  - (a) Install the air conditioning radiator (see page [AC-197](#)).