

BLOWER RESISTOR

ON-VEHICLE INSPECTION

1. INSPECT BLOWER MOTOR CONTROL

- (a) Measure the resistance of the blower resistor.

Standard resistance

Tester Connection	Specified Condition
1 - 2	1.45 to 1.67 Ω
1 - 3	0.52 to 0.60 Ω
1 - 4	3.12 to 3.60 Ω

If the resistance is not as specified, replace the blower motor control.

