

## **INSTALLATION**

### **1. INSTALL ROOM TEMPERATURE SENSOR**

- (a) Attach the claws to install the sensor.
- (b) Connect the connector.
- (c) Connect the duct.

### **2. INSTALL LOWER INSTRUMENT PANEL**

- (a) Install the lower instrument panel (see page [IP-23](#)).