

INSTALLATION

1. INSTALL SOLAR SENSOR

- (a) Connect the connector, and then push in the solar sensor.

2. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

3. CHECK SRS WARNING LIGHT

- (a) Check the SRS warning light (see page [RS-37](#)).