

REMOVAL

(2006/01-)

1. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.

2. **REMOVE AIR CLEANER CASE SUB-ASSEMBLY (for 2AZ-FE)**

(a) Remove the air cleaner case (see page [EM-98](#)).

HINT:

Refer to the procedures from the removal of the purge VSV up until the removal of the air cleaner case.

3. **REMOVE AIR CLEANER CASE (for 2GR-FE)**

(a) Remove the air cleaner case (see page [EM-21](#)).

HINT:

Refer to the procedures from the removal of the air cleaner cap sub-assembly up until the removal of the air cleaner case.

4. **DRAIN BRAKE FLUID**


NOTICE:


Wash off brake fluid immediately if it comes in contact with any painted surface.

5. **DISCONNECT BRAKE LINES**


(a) Using SST, disconnect the 6 brake lines from the actuator.

SST 09023-00101

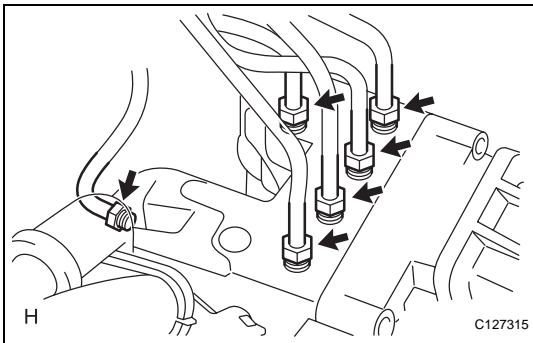

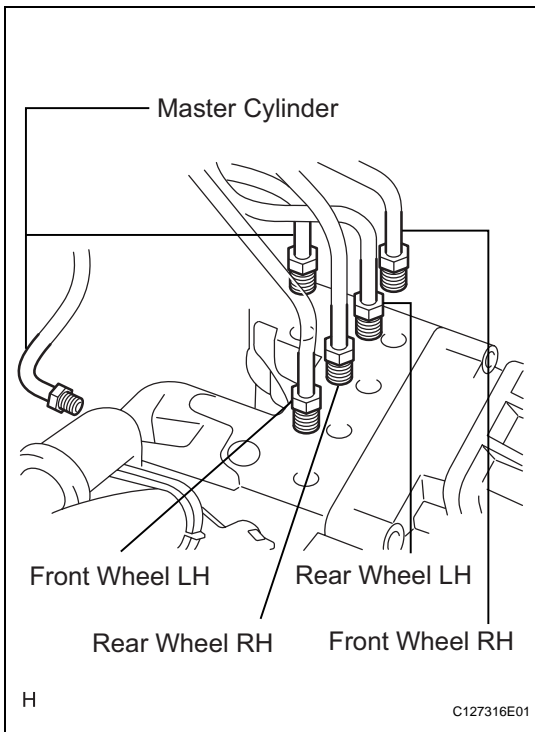


- (b) Place tags or marks to identify the installation locations of each brake line.

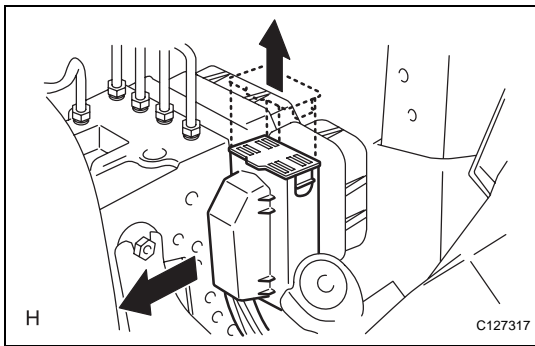


6. REMOVE ABS AND TRACTION ACTUATOR ASSEMBLY WITH BRACKET

- (a) Pull the lock lever upward and disconnect the connector.

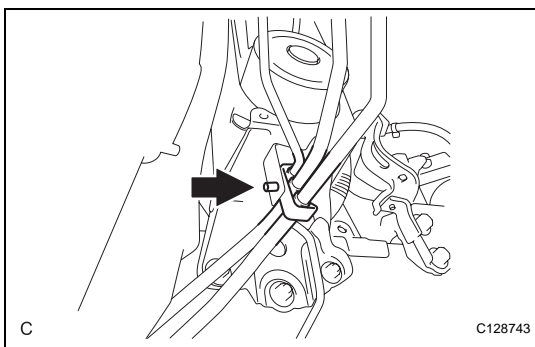

- (b) Disconnect the brake tube clamp from the bracket.

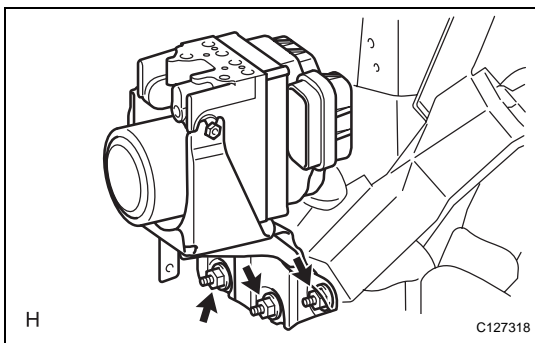

- (c) Remove the 3 nuts and actuator with bracket.
NOTICE:
Be careful not to damage the brake tubes.