## INSTALLATION

(2006/01-)

**INSTALL ABS AND TRACTION ACTUATOR** 1. **ASSEMBLY WITH BRACKET** NOTICE:

Do not remove the hole plug before connecting the brake tube. New actuators are filled with brake fluid.


(a) Install the actuator with bracket with the 3 nuts. Torque: 19 N\*m (194 kgf\*cm, 14 ft.\*lbf) HINT: The nuts should be tightened in order from 1 to 3 as shown in the illustration.

NOTICE:

Be careful not to damage the brake tubes.


(b) Connect the brake tube clamp to the bracket.



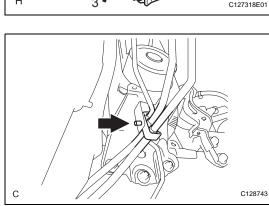


- С 2 Н C128530
- (c) Connect the connector and push the lock lever downward.

Н C127318E01

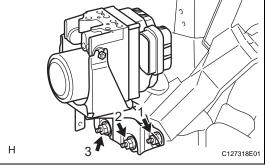

HINT:

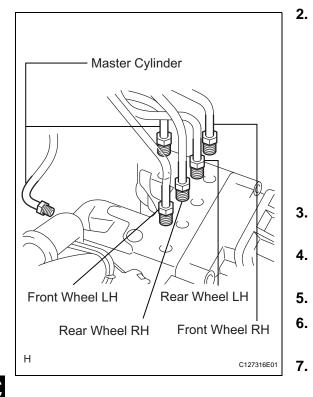

## CONNECT BRAKE LINES

(a) Using SST, connect the 6 brake lines to the correct locations on the actuator, as shown in the illustration.

SST 09023-00101

Torque: 15.2 N\*m (155 kgf\*cm, 11 ft.\*lbf) without SST

14 N\*m (144 kgf\*cm, 10 ft.\*lbf) with SST

Use a torque wrench with a fulcrum length of 30 cm (11.81 in.).

- 3. FILL RESERVOIR WITH BRAKE FLUID (See page BR-6)
- 4. BLEED AIR FROM BRAKE MASTER CYLINDER (See page BR-7)
- 5. BLEED AIR FROM BRAKE LINE (See page BR-7)
- 6. BLEED AIR FROM ABS AND TRACTION ACTUATOR ASSEMBLY (See page BR-8)
- 7. CHECK BRAKE FLUID LEVEL IN RESERVOIR (See page BR-6)
- 8. CHECK FOR BRAKE FLUID LEAKAGE
- 9. INSTALL AIR CLEANER CASE SUB-ASSEMBLY (for 2AZ-FE)
  - (a) Install the air cleaner case (see page EM-105). HINT:

Refer to the procedures from the installation of the air cleaner case up until the installation of the purge VSV.

## 10. INSTALL AIR CLEANER CASE (for 2GR-FE)

(a) Install the air cleaner case (see page EM-31). HINT:

Refer to the procedures from the installation of the air cleaner case up until the installation of the air cleaner cap sub-assembly.

- 11. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL
- 12. CHECK ABS AND TRACTION ACTUATOR ASSEMBLY WITH INTELLIGENT TESTER
  - (a) Check the ABS and traction actuator with the intelligent tester (see page BC-180).

BC