

DTC	C1246/46	Master Cylinder Pressure Sensor Malfunction
DTC	C1281/81	Master Cylinder Pressure Sensor Output Malfunction (Test Mode DTC)

DESCRIPTION

The master cylinder pressure sensor is connected to the skid control ECU in the ABS and TRACTION actuator.

DTC C1281/81 can be detected when the master cylinder pressure sensor sends a master cylinder pressure signal or test mode ends. DTC C1281/81 is output only in test mode.

DTC No.	DTC Detection Condition	Trouble Area
C1246/46	When one of following conditions is met: 1. At vehicle speed of 7 km/h (4.3 mph) or more, when PMC terminal voltage over 0.86 V, voltage does not change by 0.005 V or more for 30 seconds. 2. Noise occurs in the PMC terminal 7 times or more within 5 seconds. 3. When stop light switch OFF, PMC terminal voltage more than 0.86 V or less than 0.3 V for 5 seconds or more. 4. With IG1 terminal voltage between 9.5 V and 17.2 V, VCM terminal voltage not between 4.4 V and 5.6 V for 1.2 seconds or more. 5. When VCM terminal voltage between 4.4 V and 5.6 V, PCM terminal voltage not between 0.14 V and 4.85 V for 1.2 seconds or more.	<ul style="list-style-type: none"> Master cylinder pressure sensor Master cylinder pressure sensor circuit Stop light switch circuit ABS and TRACTION actuator
C1281/81	Detected only during test mode.	<ul style="list-style-type: none"> Master cylinder pressure sensor Master cylinder pressure sensor circuit Stop light switch circuit ABS and TRACTION actuator

INSPECTION PROCEDURE**NOTICE:**

When replacing the ABS and TRACTION actuator, perform zero point calibration (see page [BC-24](#)).

1	READ VALUE OF INTELLIGENT TESTER (STOP LIGHT SWITCH)
----------	---

- (a) Check the DATA LIST for proper functioning of the stop light switch.

Skid control ECU

Item (Display)	Measurement Item / Range (Display)	Normal Condition	Diagnostic Note
STOP LAMP SW	Stop light switch / ON or OFF	ON: Brake pedal applied OFF: Brake pedal released	-

OK:

ON (brake pedal is depressed) appears on the screen.

NG**CHECK STOP LIGHT SWITCH CIRCUIT****OK**

2 READ VALUE OF INTELLIGENT TESTER (MASTER CYLINDER PRESSURE SENSOR)

- (a) Check the DATA LIST for proper functioning of the master cylinder pressure sensor.

Skid control ECU

Item (Display)	Measurement Item / Range (Display)	Normal Condition	Diagnostic Note
MAS CYL PRESS 1	Master cylinder pressure sensor 1 reading / min.: 0 V, max.: 5 V	When brake pedal released: 0.3 to 0.9 V	-

OK:

When the pedal is depressed, the sensor output voltage increases.

NG

REPLACE ABS AND TRACTION ACTUATOR ASSEMBLY

OK**3 RECONFIRM DTC**

- (a) Clear the DTC(s) (see page [BC-47](#)).
 (b) Drive the vehicle at a speed of 30 km/h (18 mph) or more and perform a braking test (decelerate the vehicle by depressing the brake pedal).
 (c) Check if the same DTC(s) is recorded (see page [BC-47](#)).

Result

Result	Proceed to
DTC is output	A
DTC is not output	B

B**END****A**

REPLACE ABS AND TRACTION ACTUATOR ASSEMBLY

BC