# **ABS Warning Light Remains ON**

### **DESCRIPTION**

If any of the following conditions are detected, the ABS warning light remains on:


- 1. The ECU connectors are disconnected from the skid control ECU.
- 2. There is a malfunction in the skid control ECU internal circuit.
- 3. There is an open or short in the wire harness between the combination meter and the skid control ECU.

HINT:

The intelligent tester may not be used when there is a malfunction in the skid control ECU.

BC

## **WIRING DIAGRAM**

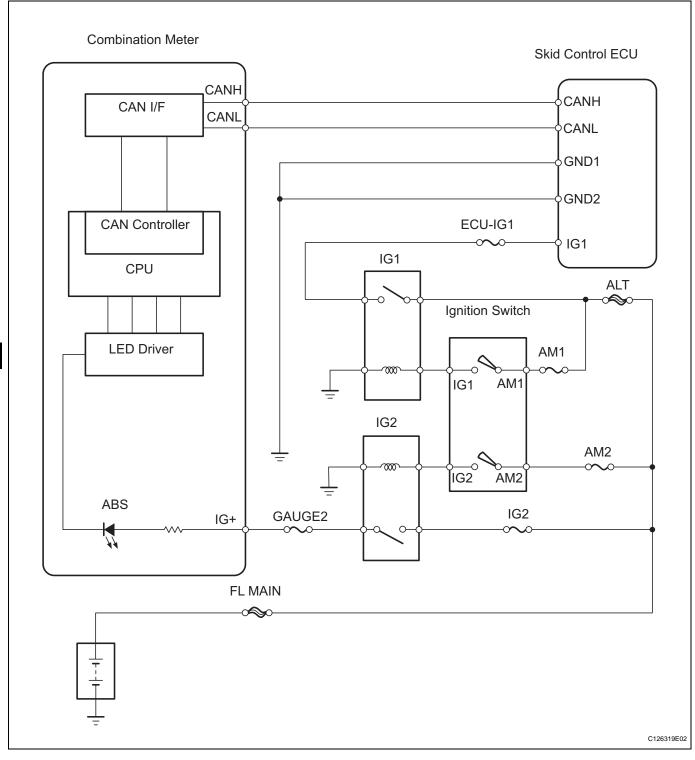

BC

## **INSPECTION PROCEDURE**

## 1 CHECK CAN COMMUNICATION SYSTEM

(a) Check if the CAN communication system DTC is output (see page CA-34).

### Result

Result	Proceed to
DTC is not output	Α
DTC is output	В

В

**REPAIR CAN COMMUNICATION SYSTEM** 



## 2 INSPECT SKID CONTROL ECU CONNECTOR

(a) Check if the skid control ECU connector is properly installed.

OK:


The skid control ECU connector is properly installed.



CONNECT CONNECTOR TO ECU SECURELY



## 3 CHECK WIRE HARNESS (SKID CONTROL ECU - BATTERY AND BODY GROUND)

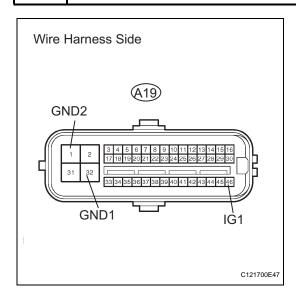

- (a) Disconnect the A19 ECU connector.
- (b) Measure the resistance of the wire harness side connector.

#### Standard resistance

Tester Connection	Specified Condition
A19-32 (GND1) - Body ground	Below 1 $\Omega$
A19-1 (GND2) - Body ground	Below 1 $\Omega$

(c) Measure the voltage of the wire harness side connector. **Standard voltage** 

Tester Connection	Condition	Specified Condition
A19-46 (IG1) - Body ground	Ignition switch ON	10 to 14 V

NG ]

REPAIR OR REPLACE HARNESS AND CONNECTOR

OK

## 4 PERFORM ACTIVE TEST BY INTELLIGENT TESTER (ABS WARNING LIGHT)

(a) Select the ACTIVE TEST, generate a control command, and then check that the ABS warning light operates.

### **Skid control ECU**

Item (Display)	Test Details	Diagnostic Note
ABS WARN LAMP	Turns ABS warning light / ON or OFF	Observe combination meter

#### OK:

### The ABS warning light is turned on or off.

HINT:

When the ABS warning light remains illuminated, opens in the wire harness of the combination meters or abnormalities in the meter circuit should be considered.



ОК

REPLACE ABS AND TRACTION ACTUATOR ASSEMBLY