

**VSC Warning Light does not Come ON****DESCRIPTION**

Refer to the description of "VSC Warning Light Remains ON" (see page [BC-139](#)).

**WIRING DIAGRAM**

Refer to the VSC warning light circuit (see page [BC-140](#)).

**INSPECTION PROCEDURE****NOTICE:**

When replacing the ABS and TRACTION actuator, perform the zero point calibration (see page [BC-24](#)).

**1 INSPECT CAN COMMUNICATION SYSTEM**

- (a) Check if the CAN communication system DTC is output (see page [BC-47](#)).

**Result**

Result	Proceed to
DTC is not output	A
DTC is output	B

**B****REPAIR CAN COMMUNICATION SYSTEM****A****2 PERFORM ACTIVE TEST BY INTELLIGENT TESTER (VSC WARNING LIGHT)**

- (a) Select the ACTIVE TEST, generate a control command, and then check that the VSC warning light operates.

**Skid control ECU**

Item (Display)	Test Details	Diagnostic Note
VSC WARN LAMP	Turn VSC warning light ON / OFF	Observe combination meter

**OK:**

The VSC warning light turns on or off.

**OK****REPLACE ABS AND TRACTION ACTUATOR ASSEMBLY****NG****3 CHECK COMBINATION METER ASSEMBLY**

- (a) Check the combination meter (see page [CA-34](#)).

**NG****REPLACE COMBINATION METER ASSEMBLY****BC**

OK

REPLACE ABS AND TRACTION ACTUATOR ASSEMBLY