

Slip Indicator Light does not Come ON**DESCRIPTION**

Refer to the description of "Slip Indicator Light Remains ON" (see page [BC-152](#)).

WIRING DIAGRAM

Refer to the SLIP indicator light circuit (see page [BC-152](#)).

INSPECTION PROCEDURE**NOTICE:**

When replacing the ABS and TRACTION actuator, perform the zero point calibration (see page [BC-24](#)).

1 CHECK CAN COMMUNICATION SYSTEM

- (a) Check if the CAN communication system DTC is output (see page [CA-34](#)).

Result

Result	Proceed to
DTC is not output	A
DTC is output	B

B**REPAIR CAN COMMUNICATION SYSTEM****A****2 PERFORM ACTIVE TEST BY INTELLIGENT TESTER (SLIP INDICATOR LIGHT)**

- (a) Using the intelligent tester's ACTIVE TEST, generate a control command, and then check that the SLIP indicator light operates.

Skid control ECU

Item (Display)	Test Details	Diagnostic Note
SLIP INDI LAMP	Turn slip indicator light ON / OFF	Observe combination meter

OK:

The SLIP indicator light turns ON and OFF.

NG**Go to step 3****OK****REPLACE ABS AND TRACTION ACTUATOR ASSEMBLY****3 CHECK COMBINATION METER**

- (a) Inspect the combination meter (see page [ME-15](#)).

NG**REPLACE COMBINATION METER****BC**

OK

REPLACE ABS AND TRACTION ACTUATOR ASSEMBLY