


## Skid Control Buzzer Circuit

### DESCRIPTION

The skid control buzzer sounds while the VSC is activated.

### WIRING DIAGRAM

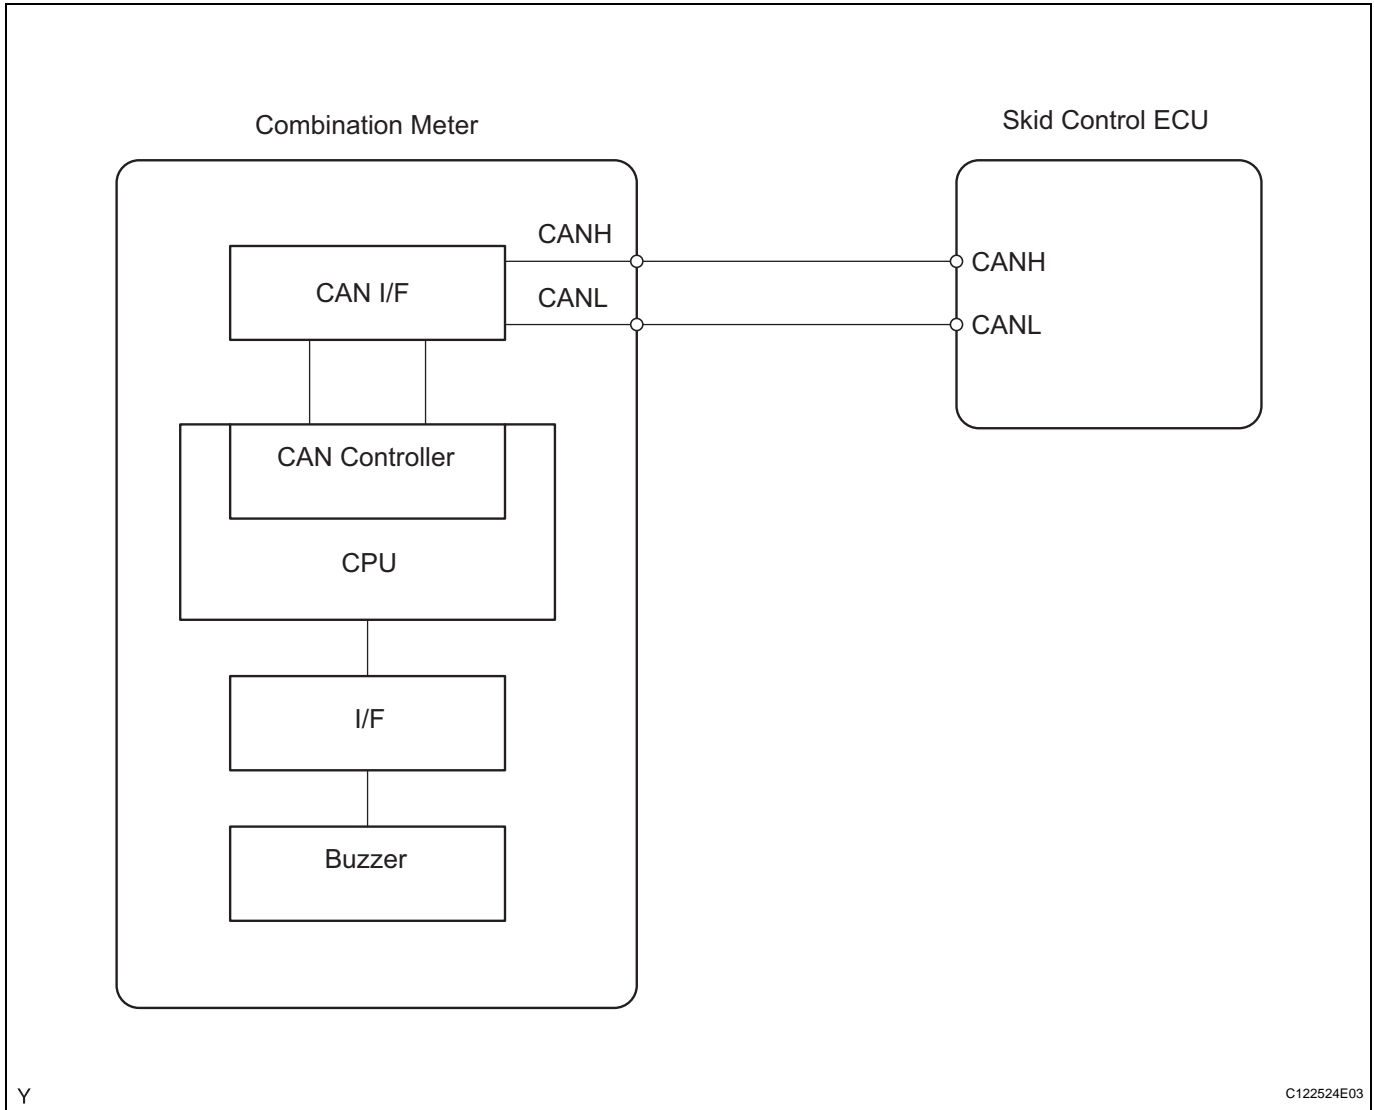

BC

### INSPECTION PROCEDURE

#### NOTICE:

When replacing the ABS and TRACTION actuator, perform the zero point calibration (see page [BC-24](#)).

#### 1 CHECK CAN COMMUNICATION SYSTEM

- (a) Check if the CAN communication DTC is output (see page [CA-34](#)).

#### Result

Result	Proceed to
DTC is not output	A



Result	Proceed to
DTC is output	B

B

REPAIR CAN COMMUNICATION SYSTEM

A

2

PERFORM ACTIVE TEST BY INTELLIGENT TESTER (SKID CONTROL BUZZER)

- (a) Select the ACTIVE TEST, generate a control command, and then check that the skid control buzzer operate.

Skid control ECU

Item (Display)	Test Details	Diagnostic Note
BUZZER	Turns skid control buzzer ON / OFF	Buzzer can be heard

OK:  
The skid control buzzer can be heard.

OK

REPLACE ABS AND TRACTION ACTUATOR ASSEMBLY

NG

3

INSPECT COMBINATION METER

- (a) Inspect the combination meter (see page [ME-15](#)).

NG

REPLACE COMBINATION METER

OK

REPLACE ABS AND TRACTION ACTUATOR ASSEMBLY